2020

Derwen Coach House Appliance Manuals and



Brynderwen Holidays

DERWEN COACH HOUSE

BRYNDERWEN HOLIDAYS

Brynderwen, Llangadog, SA19 9BS 07816914572 | 01550 779244

TABLE OF CONTENTS

Oven	3
Hob	6
Microwave	10
Coffee Machine	15
Washing Machine	23
Dishwasher	30
Toaster	37
Fridge	39
Heating	41
TV, DVD and Smart Features	44
TV Freesat	46
Mud Daddy	50
Rike Stand	51

Preparation

Tips for saving energy

The following information will help you to use your appliance in an ecological way, and to save energy:

- · Use dark coloured or enamel coated cookware in the oven since the heat transmission will be better.
- While cooking your dishes, perform a preheating operation if it is advised in the user manual or cooking instructions.
- Do not open the door of the oven frequently during
- Try to cook more than one dish in the oven at the same time whenever possible. You can cook by placing two cooking vessels onto the wire shelf.
- Cook more than one dish one after another. The oven will already be hot.
- You can save energy by switching off your oven a few minutes before the end of the cooking time. Do not open the oven door.
- · Defrost frozen dishes before cooking them.

Initial use Time setting



White making any adjustment, related symbols ill flash on the display.

Press keys to set the time of the day after the oven is energized for the first time. Confirm the setting by touching 3 symbol and wait for 4 seconds without touching any keys to confirm.



- Adjustment key Keylock symbol
- Clock symbol
- Alarm volume symbol Eco mode symbol
- Plus key
- Minus key
- Time pie symbol
- Alarm symbol End of Cooking Time symbol
- Cooking Time symbol
- Program key



If the initial time is not set, clock will run starting om 12:00 and Symbol will be displayed. he symbol will disappear once the time is set.

Current time settings are canceled in case of ower failure. It needs to be readjusted.

First cleaning of the appliance



The surface might get damaged by some fetergents or cleaning materials. Do not use aggressive detergents, cleaning powders/creams or any sharp objects during

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

- Remove all packaging materials.
- Wipe the surfaces of the appliance with a damp cloth or sponge and dry with a cloth.

Initial heating

Heat up the product for about 30 minutes and then switch it off. Thus, any production residues or layers will be burnt off and removed.



WARNING

Hot surfaces cause burnst

Product may be hot when it is in use. Never touch the hot burners, inner sections of the oven, heaters and etc. Keep children away. Always use heat resistant oven gloves when putting in or removing dishes into/from the hot

Electric oven

- Take all baking trays and the wire grill out of the oven. Close the oven door.
- Select the highest grill power; See How to operate the electric oven, page 15.
- Operate the oven for about 30 minutes.
- Turn off your oven, See How to operate the electric oven, page 15

Grill oven

- Take all baking trays and the wire grill out of the oven.
- Close the oven door.
- Select the highest grill power; see How to operate the orill, page 19.
- Operate the grill about 30 minutes.
- Turn off your grill; see How to operate the grill, page 19

Smoke and smell may emit for a couple of hours during the initial operation. This is quite normal. sure that the room is well ventilated to remove the smoke and smell. Avoid directly inhaling the smoke and the smell that emits.

How to operate the oven

General information on baking, roasting and grilling



WARNING

Hot surfaces cause burns! Product may be hot when it is in use. Never touch the hat burners, inner sections of the oven, heaters and etc. Keep children away. Always use heat resistant oven gloves when putting in or removing dishes into/from the hot



DANGER:

Be careful when opening the oven door as steam may escape.

Exiting steam can scald your hands, face and/or eyes.

Tips for baking

- Use non-sticky coated appropriate metal plates or aluminum vessels or heat-resistant silicone moulds.
- Make best use of the space on the rack.
- Place the baking mould in the middle of the shelf.
- Select the correct rack position before turning the oven or grill on. Do not change the rack position when the oven is hot.
- Keep the oven door closed.

Tips for roasting

- Treating whole chicken, turkey and large piece of meat with dressings such as lemon juice and black pepper before cooking will increase the cooking performance.
- It takes about 15 to 30 minutes longer to roast meat with bones when compared to roasting the same size of meat without bones.
- Each centimeter of meat thickness requires approximately 4 to 5 minutes of cooking time.
- Let meat rest in the oven for about 10 minutes after the cooking time is over. The juice is better distributed all over the roast and does not run out when the meat is cut.
- Fish should be placed on the middle or lower rack in a heat-resistant plate.

Tips for grilling

When meat, fish and poultry are grilled, they quickly get brown, have a nice crust and do not get dry. Flat pieces, meat skewers and sausages are particularly suited for crilling as are vegetables with high water content such as tomatoes and onions.

Distribute the pieces to be grilled on the wire shelf or in the baking tray with wire shelf in such a way that the space covered does not exceed the size of the heater.

Slide the wire shelf or baking tray with grill into the desired level in the oven. If you are grilling on the wire shelf, slide the baking tray to the lower rack to collect fats. Add some water in the tray for easy cleaning.



Foods that are not suitable for grilling carry the risk of fire. Only grill food which is suitable for intensive grilling

Do not place the food too far in the back of the grill. This is the hottest area and fatty food may catch fire.

How to operate the electric oven Select temperature and operating mode



- Function knob
- Thermostat knob
- Set the Function knob to the desired operating
- 2. Set the Temperature knob to the desired
- temperature. » Oven heats up to the adjusted temperature and maintains it. During heating, temperature lamp stays

Switching off the electric oven

 
to obtain a good grill performance.

Turn the function knob and temperature knob to off (upper) position.

Rack positions (For models with wire shelf) It is important to place the wire shelf onto the side rack

correctly. Wire shelf must be inserted between the side racks as illustrated in the figure. Do not let the wire shelf stand against the rear wall of the oven. Slide your wire shelf to the front section of the rack and settle it with the help of the door in order

14/EN



Operating modes

The order of operating modes shown here may be different from the arrangement on your product. Oven lamp



The oven is not heated. Only the oven lamp is turned on.

Possibly, the external cooling fan will also operate to avoid heating of the compartments.

Operating with fan



The oven is not heated. Only the fan (in the rear wall) is in operation. Suitable for thawing frozen granular food slowly at room temperature and cooling down the cooked food.

Fan Heating



Warm air heated by the rear heater is evenly distributed throughout the oven rapidly by means of the fan. It is suitable for cooking your meals in different rack levels and preheating is not required in most cases. Suitable for cooking with multi travs.



Large grill at the ceiling of the oven is in operation. It is suitable for grilling large amount of meat

- Put big or medium-sized portions in correct rack position under the grill heater for grilling.
- Set the temperature to maximum level.
- Turn the food after half of the grilling time.

 
Full grill+Far



Large grill at the ceiling of the oven and the fan are in operation. It is suitable for grilling large amount of meat

- Put big or medium-sized portions in correct rack position under the grill heater for grilling.
- Set the temperature to maximum level.
- Turn the food after half of the grilling time.

Using the oven clock



- Adjustment key Keylock symbol
- 3 Clock symbol
- Alarm volume symbol
- Eco mode symbol
- Plus key
- Minus key
- Time pie symbol
 Alarm symbol
- 10 End of Cooking Time symbol
- Cooking Time symbol
- 12 Program key
- Maxir cooki Progr

Maximum time that can be set for end of cooking is 5 hours 59 minutes. Program will be cancelled in case of power failure. You must reprogram the oven.



While making any setting, related symbols will flash on the display. You must wait for a short time for the settings to take effect.



no cooking setting is made, time of the day annot be set.



emaining time will be displayed if cooking ne is set when the cooking starts. Cooking by setting the cooking time;

You can set the oven so that it will stop at the end of the specified time by setting the cooking time on the timer.

- Select the function for cooking.
- Touch ⊕ until → symbol appears on display for cooking time.
- Set the cooking time with -/ keys.
- » After the cooking time is set, | > | symbol and the time slice will appear on display continuously.
- Place the dish into the oven and set the temperature with temperature knob. Cooking will start.

» Cooking time starts to count down on display when cooking starts and all parts of time slice symbol is lit. The set cooking time is divided into 4 equal parts and when the time of each parts ends, the symbol of that parts turns off. So you can understand the ratio of remaining cooking time to total cooking time easily. Setting the the end of cooking time to a later time;

After setting the cooking time on the timer, you can set the end of cooking time to a later time.

- 1. Select the function for cooking.
- Touch
 until
 symbol appears on display for cooking time.
- Set the cooking time with +/= keys.
- » » Once the Cooking Time is set, |> symbol will appear on display continuously.
- Touch ⑤ until → symbol appears on display for the end of cooking time.
- Press → Prese + Preset have the end of cooking time.
 After the cooking time is set, → symbol plus → symbol and the time slice will appear on display continuously. Once the cooking starts, → symbol disagonears.
- Place the dish into the oven and set the temperature with temperature knob. Cooking will start
- » Over timer calculates the startup time by deducting the cooking time from the end of cooking time you have set. Selected operating mode is activated when the startup time of cooking has come and the oven is heated up to the set temperature. It maintains this temperature until the end of cooking time.
- » Cooking time starts to count down on display when cooking starts and all parts of time slice symbol is lit. The set cooking time is divided into 4 equal parts and when the time of each parts ends, the symbol of that parts turns off. So you can understand the ratio of remaining cooking time to total cooking time easily.

- After the cooking process is completed, "End" appears on the displayed and the timer gives an audio warning.
- Audio warning sounds for 2 minutes. To stop the audio warning, just press any key. Audio warning will be silenced and current time will be displayed.



If you press any key at the end of the audio warning, the oven will restart operating. Turn the temperature knob and function knob to "0" (off) position to switch off the oven in order to prevent re-operation of the oven at the end of warning.

Activating the keylock

You can prevent oven from being intervened with by activating the key lock function.

- Touch ≡ until symbol appears on display.
- » "OFF" will appear on the display.
- Press to activate the key lock.
- » Once the key lock is activated, "On" appears on the display and the ⊕ symbol remains lit.



Oven keys are not functional when the key lock is activated. Key lock will not be cancelled in case of power failure.

 
To deactivate the keylock

- Touch ≡ until symbol appears on display.
- » "On" will appear on the display.
- Disable the key lock by pressing the key.
 "OFF" will be displayed once the keylock is deactivated.

Setting the alarm clock

You can use the timer of the product for any waming or reminder apart from the cooking program. The alarm clock has no influence on the functions of the oven. It is only used as a warning. For example, this is useful when you want to turn food in the oven at a certain point of time. Timer will give an audio warning at the end of the set time.

Touch ⊕ until △ symbol appears on display.



Set the alarm duration by using +/= keys.



» A symbol will remain lit and the alarm time will appear on the display once the alarm time is set.

 At the end of the alarm time, \(\triangle \) symbol starts flashing and the audio warning is heard.

16/EN

Turning off the alarm

- 1. Audio warning sounds for 2 minutes. To stop the audio warning, just press any key.
- » Audio warning will be silenced and current time will be displayed.

Cancelling the alarm;

- 1. Touch ⊕ until △ symbol appears on display in order to cancel the alarm.
- Press and hold we key until "00:00" is displayed



Alarm time will be displayed. If the alarm time and cooking time are set concurrently, shortest time will be displayed.

Changing alarm tone

- Touch : until □ symbol appears on display.
- Adjust the desired alarm tone with # / = keys.
- 3. The tone you have set will be activated in a short

» Selected alarm tone will appear as "b-01", "b-02" or "b-03" on the display.

Changing the time of the day

To change the time of the day you have previously set:

- Touch : until symbol appears on display.
- Set the time of the day with / keys.
- 3. The time you have set will be activated in a short

Economy mode

You can save energy with economy mode while cooking by setting cooking time in the oven. This mode completes the cooking with the inner temperature of the oven by switching off the heaters before the end of cooking time.

Setting the economy mode

- Touch : symbol until eco symbol appears on display.
- » "OFF" will appear on the display
- Enable economy mode by touching key. » Once the economy mode is activated, "On" appears
- on the display and the eco symbol remains lit. Disabling economy mode
- Touch : symbol until eco symbol appears on
- » "On" will appear on the display.
- Disable economy mode by touching key. » "Off" will be displayed once the eco mode is deactivated

Setting the screen brightness

- Touch : until d-01 or d-02 or d-03 appears on display for display brightness.
- Set the desired brightness with + /= keys.
- » The time you have set will be activated in a short

Cooking times table



The timings in this chart are meant as a guide. imings may vary due to temperature of food, thickness, type and your own preference of cooking

Baking and roasting



st rack of the oven is the bottom rack.

Dish	Cooking level number		Rack position	Temperature (°C)	Cooking time
Cakes in tray*	One level	3	3	175	(approx. In min.)
	2 levels	(3)	1-5	175	30 40
Cakes in mould*	One level	(8)	2		45 50
Cakes In cooking paper*	One level	8	3	175 175	50 60 25 35
	2 levels	(3)	1-5	175	
	3 levels	3	1-3-5	180	35 45
Sponge cake"	One level	(8)	3	200	45 55
Cookies*	One level	(3)	3	175	8 15
	2 levels	(3)	1-5	170 190	25 30
	3 levels	3	1-3-5	175	35 45
Dough pastry"	One level	(3)	3	200	30 40
	2 levels	(8)	1-5	200	35 45
	3 levels	(8)	1-3-5	200	50 60
Rich pastry*	One level	(8)	3		55 65
The state of the s	2 levels	(8)	1-5	200	25 35
	3 levels			200	35 . 45
		8	1-3-5	190	45 55
seven*	One level	(9)	3	200	35 45
asagna*	One level	8	3	200	30 40
Beef steak (whole) /	One level	(2)	3	25 min 260/mm	30 40

Roast				then 180 190	
Leg of Lamb (casserole)	One level	₩ .	3	25 min. 220 then 180 190	70 90
Roasted chicken	One level	(8)	2	15 min. 250/max, then 190	55 65
Turkey (5.5 kg)	One level	3	1	25 min. 250/max, then 190	150 210
Fish	One level	(8)	3	200 he other one on the lower rack.	2030

 It is suggested to perform preheating for all foods. (**) In a cooking that requires preheating, preheat at the beginning of cooking until the thermostat lamp turns off. Tips for cooking vegetables

Tips for baking cake

- If the cake is too dry, increase the temperature by 10°C and decrease the cooking time.
- If the cake is wet, use less liquid or lower the temperature by 10°C.
- If the cake is too dark on top, place it on a lower rack, lower the temperature and increase the
- If cooked well on the inside but sticky on the outside use less liquid, lower the temperature and increase the cooking time.

Tips for baking pastry

- If the pastry is too dry, increase the temperature by 10°C and decrease the cooking time. Dampen the layers of dough with a sauce composed of milk, oil, egg and yoghurt.
- If the pastry takes too long to bake, pay care that the thickness of the pastry you have prepared does not exceed the depth of the tray.
- If the upper side of the pastry gets browned, but the lower part is not cooked, make sure that the amount of sauce you have used for the pastry is not too much at the bottom of the pastry. Try to scatter the sauce equally between the dough layers and on the top of pastry for an even browning.



Cook the pastry in accordance with the mode and temperature given in the cooking table. If the bottom part is still not browned enough, place it on one lower rack next time.

Cooking times table for grilling

depending on thickness

If the vegetable dish runs out of juice and gets
too dry, cook it in a pan with a lid instead of a
tray. Closed vessels will preserve the juice of the
dish.

If a vegetable dish does not get cooked, boil the vegetables beforehand or prepare them like canned food and put in the oven.

How to operate the grill



Close oven door during grilling. Hot surfaces may cause burns!

Switching on the grill

- 1. Turn the Function knob to the desired grill symbol.
- Then, select the desired grilling temperature.
- 3. If required, perform a preheating of about 5
- » Temperature light turns on.

Switching off the grill

1. Turn the Function knob to Off (top) position.



Foods that are not suitable for grilling carry the risk of fire. Only grill food which is suitable for intensive grilling

Do not place the food too far in the back of the grill. This is the hottest area and fatty food may catch fire.

Grilling with electric grill Food	Insertion level	Grilling time (approx.)
Fish	45	2025 min. "
Sliced chicken	45	2535 min.
Lamb choos	45	2025 min.
Roast beef	45	2530 min. "
Veal chops	4,,5	2530 min. "
Toast bread	4	1,2 min.

How to use the hob

General information about cooking



Never fill the pan with oil more than one third of it. Do not leave the hob unattended when heating oil. Overheated oils bring risk of fire. Never attempt to extinguish a possible fire with water! When oil catches fire, cover it with a fire blanket or damp cloth. Turn off the hob if it is safe to do so and call the fire department.

- Before frying foods, always dry them well and gently place into the hot oil. Ensure complete thawing of frozen foods before frying.
- Do not cover the vessel you use when heating oil. Place the pans and saucepans in a manner so that their handles are not over the hob to prevent heating of the handles. Do not place unbalanced and easily tilting vessels on the hob.
- Do not place empty vessels and saucepans on cooking zones that are switched on. They might get damaged.
- Operating a cooking zone without a vessel or saucepan on it will cause damage to the product. Turn off the cooking zones after the cooking is complete.
- As the surface of the product can be hot, do not put plastic and aluminum vessels on it. Clean any melted such materials on the surface immediately
- Such vessels should not be used to keep foods
- Use flat bottomed saucepans or vessels only. Put appropriate amount of food in saucepans and pans. Thus, you will not have to make any unnecessary cleaning by preventing the dishes

from overflowing. Do not put covers of saucepans or pans on cooking zones.

Place the saucepans in a manner so that they are centered on the cooking zone. When you want to move the saucepan onto another cooking zone, lift and place it onto the cooking zone you want instead of sliding it.

Saucepan selection

- Glass ceramic surface is heatproof and is not affected by big temperature differences.
- Do not use the glass ceramic surface as a place of storage or as a cutting board.

Use only the saucepans and pans with machined bottoms. Sharp edges create scratches on the surface.



Spills may damage the glass ceramic surface and cause fire.

Do not use vessels with concave or convex bottoms.

Use only the saucepans and pans with flat bottoms. They ensure easier heat transfer

For induction hobs, use only vessels suitable for induction cooking. Saucepan test

Use following methods to test whether your saucepan is compatible with the induction hob or not.

- Your saucepan is compatible if its bottom holds a
- Your saucepan is compatible if "-" symbol does not flash when you place your saucepan on a

Only ferromagnetic pans can be used for induction

Ferromagnetic materials include:

- Enameled steel
- Cast iron

Stainless steel designed for induction cooking Non-ferromagnetic materials include: These types of pans will not work with induction

cooking.

- Stainless steel
- Glass
- Ceramic
- Copper or aluminum pans



Some saucepans have a smaller ferromagnetic area than the real diameter of the saucepans. Only this area will be heated up by the induction zone, therefore the cooking performance may be reduced. These pan types

cannot be detected by bigger induction zones. The diameter of pan's ferromagnetic area should match the size of the cooking zone. If the pan is not detected by the cooking zone, try it on the next smaller cooking zone. Some vessels have a base which includes non-ferromagnetic materials such as aluminum. These types of vessels cannot be detected by the induction zone

You can use steel, teflon or aluminium saucepans with special magnetic bottom that contains labels or warnings indicating that the saucepan is compatible with induction cooking. Glass and ceramic vessels,

pots and the stainless steel vessels with nonmagnetic aluminium bottom should not be used.

Saucepan recognition-focusing system

In induction cooking, only the area covered by the vessel on the relevant cooking zone is energised. The vessel's bottom is recognised by the system and only this area is heated automatically. Cooking stops if the cooking vessel is lifted from the cooking zone during cooking. Selected cooking zone and "L" symbol flashes alternately.

Safe use

Do not select high heating levels when you will use a non-sticking (teflon) saucepan with no oil or with very little oil.

Do not put metal items such as forks, knives or saucepan covers onto your hob since they can get heated.

Never use aluminium foil for cooking. Never place food items wrapped with aluminium foil onto the cooking zone.



f there is an oven under your hob and if it is inning, sensors of the hob can decrease the cooking level or turn off the oven.



When the hob is running, keep items with nagnetic properties such as credit cards or cassettes away from the hob.

Selecting cooking zone suitable to the vessel Large cooking zone Normal cooking zone Ø 28 cm Small cooking zone Ø 18 cm Ø 14,5 cm Ø 21 cm Large cooking zone Normal cooking zone Choose the correct pan size for the Small cooking zone Choose the correct pan surface cooking area. The diameter of the Choose the correct pan size for the surface size for the surface

pan's base should correspond to the size of the surface cooking area

Distributes the power ideally.

Provides perfect heat distribution. Used to cook dishes such as large crepes or large fishes rare or very rare.

cooking area. The

diameter of the pan's base should correspond to the size of the surface cooking area. Distributes the power

ideally. Provides perfect heat distribution. Used for all kinds of cookings.

cooking area. The diameter of the pan's base should correspond to the size of the surface cooking area. Used for slow cookings

(sauces, creams) Used to prepare small portions or portions based on number of persons.

 
Using the hobs



Do not allow any object to drop on the hob. Even small objects such as a saltshaker may damage the hob.

Do not use cracked hobs. Water may leak through these cracks and cause short circuit. In case of any kind of damage on the surface (eg., visible cracks), switch off the product immediately to minimize the risk of electric shock

Control panel



Specifications

\$00000c

Main key - ON/OFF key

 
Keylock

Temperature setting/Increasing timer Temperature setting/Decreasing timer * Activate/deactivate timer

Cooking zone selection controls

Cooking zone display (temperature setting 0 ... 9)

* Timer display (there are 4 LEDs for 4 different cooking zones)





vays keep the control panels clean and dry. sisture and dirt may cause malfunctioning.

(*) If your hob is equipped with ≅ O. O. ≈ a timer



0

(*) Not contained in hobs with 3 burners.



(*) If your hob is equipped with

Graphics and figures are for informational purposes only. Actual appearance or functions may vary. Turning on the hob

Touch the "O" key on control panel at least 1 second. Hotplate displays light up. "[2]" and all the relevant decimal points flash in all hotplate displays. The hob is ready for use . You can select different hotplates within next 10 seconds.

The hob will automatically turn off if there is no operation within 10 seconds. Selecting the Hotplates(Cooking Zone)

Put your pan suitable for induction-cooking (pan with magnetic bottom, see page 12, "suitable pan choice") onto the related hotplate.



Touch the relevant hotplate selection control to turn on the desired hotplate. After the hotplate is selected," [Q] "decimal point stops flashing on the related hotplate display and becomes solid.

Set the heat level between "1" and "9"or "9"or "1" by touching "\" or "\" keys.

"^" and "~" keys are equipped with a repeat function. If you touch one of the key longer time, heat level will continually increased or reduced at every 0,4

If you begin with "^" key, "1" will appear on the display. If you begin with ">" key, 'A" and "9" will flash on the display with a period of half seconds. This indicates that Automatic Cooking is running. At the end of the preset time for Automatic Cooking by the manufacturer, selected hotplate stops the Automatic Cooking function and starts operating at the level that had been set while the Automatic Cooking function was selected.

4. To switch your oven to high power position, increase the level up to 9 with "^" key and then press ""^" key again. Thus, it will switch into the high power "P" (Boost) position.

If is flashing:

- Your pan is not suitable for induction cooking.
- There is nothing on the selected hotplate. Bottom diameter of the pan is small for the



Example: If one of the hotplates in the same direction (right or left) is set to level "P", then the system allows you to adjust the other hotplate up to level 8 without changing the setting of the first hotplate

Using the induction hotplates safely and efficiently

Operating principle: Because of its operating principle, induction hob directly heats the pan. Therefore, it has many advantages compared to other types of hobs. It is more efficient and the surface of the hob is cooler

Your induction hob is equipped with superior safety systems that will allow you to use your appliance with maximum safety

The hob control has a limitation of the operating time. If one or more hotplates are inadvertently not switched off , hotplate will be automatically deactivated after a certain amount of time. (see following Table-1). Meantime; If a timer was associated with the hotplate. than a "00" will be displayed on the timer display for 10 second. The limit of the operating time depends on the temperature setting selected by the manufacturer. After the hotplate is switched off automatically as described above it becomes ready to be operated by the user again. Maximum operating time is applied also for this heat setting.

Important: Your hob contains zones of Ø 145, Ø180. Ø 210 and Ø 280 which have induction features. Thanks to the induction feature, each hotplate automatically detects the diameter of the pan put on it. "Energy is created only at places where the bottom of the pan touches" and thus, energy is consumed at the minimum level.


Table-1: Preset operating times when you forget to

turn off the hob Temperature level Operation time limit hour 5 1,5 1.5 1.5 0.5 P (boost) - Quick 10 minutes (*) Cooking (booster) (*) 10 minutes later, hotplate decreases to level 9.

Using 2 cooking zones simultaneously at same

The total power of hob is 3000 W. The performance of hob can be changed according to number of active zones. If two zones are used at the same time, the

zones at the same side should be used. This usage style provides more cooking and pan detection performance. You can see in figure below the recommended usage style to use two cooking zone at the same time

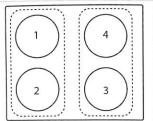



If the right and left cooking zones of hob operates at the same time, the cooking zones operate discontinuously. Therefore the cooking and pan detection performance decrease.

Over Heating Protection

There are some sensors inside your hob in order to provide over heating protection. Below responses may arise in an over heating condition:

- The running hotplate can be turned off.
- Selected level can be decreased. (But it is not indicated on the display.)

Safety system against overflow

Your hob is equipped with a safety system against overflowing. If any overflowing occurs on the control panel for any reason, the system automatically cuts the power connection to turn your hob off. Meantime. "F" appears on the touch -display.

Residual heat indicator

The induction hob may get hot after the cooking process because of the pan left on the hotplate. Until the glass table on the hob section drops down to a safe temperature, "H" will be displayed on the control panel. "Do not touch the related sections until "H" disappears.



emperature display does not light up and vorn the user anymore during a power failure.

Sensitive power setting

Because of its operating principle, induction hob responds to the commands immediately. They change the power settings in a quick way. Thus, you may prevent a cooking dish (water, milk) from overflowing by turning off the appliance.

Automatic Cooking and High Power (Booster)

Automatic cooking function makes cooking easier. If the Automatic Cooking is active, the hotplate will be operated with maximum power for a period of time (see Table -2). Quick heating time depends on the selected heat level. This is indicated through a flashing "A" alternating with the heat setting value (e.g. half second "A" and half second "9") in the hotplate display. At the end of the quick heating time, hob will return to the normal heating mode for the selected level and "A" will disappear

All hotplates are equipped with Quick Heating function. The below table contains the automatic heating times for different heating levels.

Table-2: Quick heating times in automatic cooking

Temperature level	Quick Heating Time of Operation - (second)	
1	10	
2	30	
3	47	
4	65	
5	85	
6	25	
7	35	
8	45	
9	10	

Turning On the Automatic Cooking Feature:

- Turn on the hob.
- Select desired hotplate by touching hotplate
- ">" key to switch the heat value of the hotplate to the desired level. "9" and "A" will be displayed on the screen respectively. This means heat setting value "9" and Quick Heating feature is active now
- Quick heating function of the level to be selected is determined with "\" or "\" keys.
- 5. The specified Quick Heating function operates for the period according to the cooking level in table 2 and reverts back to its level after the time elapses. (For example, this period is 25 minutes for level 6)

Turning Off the Automatic Cooking Feature:

- The Automatic Cooking function can be turned
- off early by decreasing the heat setting to "0". Automatic Cooking is not active anymore when the period in table 2 is over.

High Power (Booster)

You can use high power level to heat your hob faster. But, it is not recommended to cook in this position for too long.

Select the relevant hotplate to be operated and place the suitable pan. Increase its level up to 9 and then revert it back to P position by pressing "^" key. Due to temperature, your hob will only be allowed to operate for maximum 10 minutes and the hotplate of the hob selected for booster function will automatically decrease to level 9.

Turning the hob off

If the main switch "O" is pressed more than 2 sec, the hob is turned off. If the relevant hotplate is still hot when the hob is turned off, then "H" will light in the display continuously.

Turning Off The Individual Hotplates:

A selected hotplate can be turned off in 3 different

1. Simultaneous operation of the "^"and "~"

The desired hotplate must be chosen with the hotplate selection "C" key. For example "Q"

Decimal point becomes solid on the display of the hotplate. The "^"and "~" keys must be touched at the same time to turn off the hotplate.

2. Reduction of the heat setting to "0" by operating the ">" key of the desired hotplate

Use of timer turn off function for desired hotplate (If timer function is available)

Keylock *

Touch the "O" key for longer than 2 seconds to lock the touch control. Operation will be confirmed with an

audible signal. Then, "O" LED will flash and all cooking zones will be locked. Cooking zones, can only be locked in the operation mode. If the cooking zones are locked: only the main

key "O" can be operated. "O" LED will flash and indicate a key lock module. If you turn the hob off when the keys are locked, the keylock will be activated next time you turn the hob on again. Key lock must be deactivated in order to be able to operate the hob.



"O" key will allow you to lock or unlock the touch control in operation mode.

Touch "O" key for 2 seconds to unlock the cooking zones. Operation will be confirmed with an audible signal

Then, "O" LED turns off. Now the touch control is unlocked and can be operated normally.

Child Lock

You can protect the hob against being operated unintentionally in order to prevent children from turning on the cooking zone. Child Lock function contains a few complex steps to lock the touch control unit. Child Lock can only be activated and deactivated in Standby mode.

Locking the module:

- Touch main key "O" to turn on the hob.
- Touch "^" and "\" keys simultaneously for at least 2 seconds.
- Then, touch "\(\sigma\)" key once again.
- » Child Lock function is activated and "L." appears on all cooking zone displays.

Disabling the Child Lock:

You can disable the child lock as you have activated it.

- 1. Touch main key "O" to turn on the hob.
- Touch "∧" and "∨" keys simultaneously for at least 2 seconds.
- Then, touch "\u222" key once again.
- » "L." appears on all cooking zone displays as long as the Child lock is activated. "L." will disappear when the lock is deactivated successfully.

Timer function *

 
This feature facilitates cooking for you. You will not have to attend the hob continuously during the cooking process and the cooking zone will turn off automatically at the end of the time you have selected. Timer provides following features: Touch control can command to maximum 4 cooking zone timers and one alarm cooking timer assigned at the same time. All timers can only be used in operation mode.

Timer as an alarm

Alarm timer operates independently from other cooking zones. Therefore, it is not important whether a cooking zone is selected or not.

18/EN

- Touch "O" key to enable the alarm timer. "00" and "QQ=" will appear on the timer display and a dot will appear on the lower right side. Thus, alarm timer is activated.
- 2. Then, set the desired time value by touching "^" and "~" keys.
- 3. Timer will start to countdown after you have made



» When the time is over, an audible alarm will sound. Touch any key on the touch control panel to silence the audible alarm.

Cooking zone timer:

The cooking zone timers cay only be set for the cooking zones that are activated.

- First turn on the hob and then enable the desired cooking zone. (cooking zone must be set to a value between 1 and 9)
- 2. As in the alarm timer, enable the cooking zone timer by touching "O" key. "00" and "A C C N" will appear on the timer display and a dot will appear on the lower right side. Thus, cooking zone timer is activated.
- 3. You must touch "O" key for a second time in order to enable cooking zone timer. Now you can assign the timer.
- Set the desired time value by touching "^" and "\" keys.

To set the hob timers:

Display the remaining time value of the cooking zone timer 3 (indicator LED flashes) to the timer display (the indicator LEDs of the active timers of the cooking zones 1 and 4 in fact will not be visible on the timer display).

- 1. After enabling the first cooking zone timer, touch the "O" key again. The control will turn clockwise towards the next active cooking zone assigned to the timer. Assignment proposal will be shown with a flashing "O" LED.
- 2. Set the desired time value by touching "^" and
- Timer activated for the cooking zone which was set first is indicated with a continuously flashing "O" LED.
- More timers can be assigned for other active cooking zones by touching the "O" key once
- After 10 seconds, timer display reverts back to the timer that will end first.
- "ສູ້ ເຊື້ອ" LEDs that illuminate continuously on the timer display indicate the timer that is currently counting down.
- You can display the values set for cooking zone timers and egg timer by changing the position of "○" key. A flashing front right "回" LED always shows an assignment.

If no LED is flashing, value of the egg timer will be displayed on the timer screen.

Disabling the timers:

First you must display the timer by changing the position of the "O" key until the timer appears. This value can later be cancelled in 2 different ways:

- By decreasing the value step by step to "00" by touching "> " key.
- By touching "\shi" and "\shi" keys simultaneously for half second until "00" appears on timer

When the time is over, an audible alarm will sound. Touch any key on the touch control panel to silence the audible alarm.

Some sounds may be heard from induction heated hob. Such sounds are normal and a part of cooking with induction. Such sounds:

- may be intensified when the level is in high power position.
- may arise from the structural materials of the

- In low power positions, a regular on-off sound can be heard due to the operating principle.
- Sound can occur while heating an empty pan. Such sound will disappear when you add water or food in it.
- Noise of the fan which is used to cool the electronic system can be heard.

Sensor Calibration and Error Messages


When the supply power is applied, hob control system performs calibration depending on the sensor, glass and ambient conditions. Do not cover the glass part of the sensor with anything during calibration. Hob control system should also not be exposed to strong light sources such as sun light, strong halogen lamps and etc.


Cause of error	Display
Ambient light is too high	F1
Fluorescent lamp	F2
Sensor is covered with a bright substance	F3
Ambient light is fluctuating strongly	F4
Calibration error	AX
Induction hardware error	EX
(x = "09")	


Sample application:


Following lightning conditions will allow a smooth calibration:

    Illumination with a bulb without a reflector (100W, dull) 70 cm above the glass ceramic hob. After a successful calibration, it is warranted that the hob will operate as intended even under a strong illumination such as halogen spot lamp wit reflector (50 W). In case of an error, the calibration is repeated until the ambient conditions allow a successful calibration. The operation of the hob control is only possible, if the calibration of all sensors were successfully completed. After successful finished calibration process the control tolerates a very high rate of ambient light. During the operation of the hob control, it continuously adopts and recalibrates itself towards the changes in









 EN

DAILY REFERENCEGUIDE

THANK YOU FOR PURCHASING A HOTPOINT PRODUCT

To receive more comprehensive help and support, please register your product at www.hotpoint-ariston.com/register




You can download the Safety Instructions and the Use and Care Guide by visiting our website www.hotpoint.eu and following the instructions on the back of this booklet.




Read the safety instructions carefully before using the product

PRODUCT DESCRIPTION

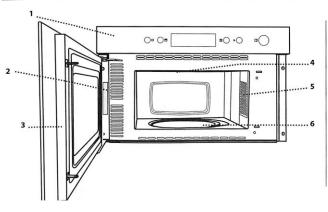

- 1. Control panel
- **2.** Identification plate (do not remove)
- 3. Door
- 4. Upper heating element/grill
- 5. Light
- 6. Turntable

 CONTROL PANEL



1. STOP

For stopping a function or an audible signal, cancelling the settings and switching off the oven.

2. MICROWAVES FUNCTION / POWER

For selecting the microwaves function and setting the required power level.

- 3. GRILL FUNCTION
- 4. CRISP FUNCTION
- 5. DISPLAY

6. + / - BUTTONS

For adjusting the settings of a function (e.g. length, weight).

7. DYNAMIC DEFROST

8. START

For starting a function. When the oven is switched off, it activates the "Jet Start" microwave function.

9. DOOR OPENING BUTTON

ACCESSORIES



Download the Use and Care Guide at www.hotpoint.eu for more information

TURNTABLE



Placed on its support, the glass turntable can be used with all cooking methods. The turntable must always be used as a base plate for other

containers and accessories.

TURNTABLE SUPPORT



Only use the support for the glass turntable. Do not rest other accessories on the support.

CRISP PLATE



Only for use with the specific "Dynamic Crisp" function. The crisp plate must always be placed in the centre of the glass turntable and can be

preheated when empty, using the special function for this purpose only. Place the food directly on the crisp plate.

HANDLE FOR THE CRISP PLATE



Useful for removing the hot crisp plate from the oven.

WIRE SHELF



This allows you to place food closer to the grill, for perfectly browning your dish. Place the wire shelf on the turntable, making sure that it does not

come into contact with other surfaces.

COVER (IF SUPPLIED)



Useful for covering food while it is cooking or heating in the microwave.

The cover reduces splashes, keeps foods moist and can also be used to create two cooking

levels. It is not suitable with any of the grill functions (including "Dynamic Crisp").

Other accessories that are not supplied can be purchased separately from the After-sales Service.

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use and resistant to oven temperatures.

Metallic containers for food or drink should never be used during microwave cooking.

Always ensure that foods and accessories do not come into contact with the inside walls of the oven.

Always ensure that the turntable is able to turn freely before starting the oven. Take care not to unseat the turntable whilst inserting or removing other accessories.

FUNCTIONS



Download the Use and Care Guide at www.hotpoint.eu for more information

MICROWAVES For quickly cool

For quickly cooking and reheating food or drinks.

POWER	RECOMMENDED FOR	
750 W	Quickly reheating drinks or other foods with a high water content or meat and vegetables.	
500 W	Cooking fish, meaty sauces, or sauces containing cheese or egg. Finishing off meat pies or pasta bakes.	
350 W	Slow, gently cooking. Perfect for melting butter or chocolate.	
160 W	Defrosting frozen food or softening butter and cheese.	
0 W	When using the timer only	

DYNAMIC CRISP

For perfectly browning a dish, both on the top and bottom of the food. This function must only be used with the special crisp plate.

DURATION (min)	RECOMMENDED FOR	
3 - 4	Cookies (8- 10 pieces)	
7 - 8	Frozen pizza (350 g)	
7 - 9	Sponge cake (500 g)	
8 - 10	Fish fingers (8 pieces)	
9 - 10	Pizza (350 g)	
10 - 14	French fries (200 g - 300g)	
13 - 15	Quiche Lorraine (500 g)	

Required accessories: Crisp plate, handle for the crisp plate

ACCESSORIES



Download the Use and Care Guide at www.hotpoint.eu for more information

TURNTABLE



Placed on its support, the glass turntable can be used with all cooking methods. The turntable must always be used as a base plate for other socies.

TURNTABLE SUPPORT



Only use the support for the glass turntable. Do not rest other accessories on the support.

CRISP PLATE



Only for use with the specific "Dynamic Crisp" function. The crisp plate must always be placed in the centre of the glass turntable and can be

preheated when empty, using the special function for this purpose only. Place the food directly on the crisp plate.

HANDLE FOR THE CRISP PLATE



Useful for removing the hot crisp plate from the oven.

WIRE SHELF



This allows you to place food closer to the grill, for perfectly browning your dish. Place the wire shelf on the turntable, making sure that it does not

come into contact with other surfaces.

COVER (IF SUPPLIED)



Useful for covering food while it is cooking or heating in the microwave.

The cover reduces splashes, keeps foods moist and can also be used to create two cooking

levels. It is not suitable with any of the grill functions (including "Dynamic Crisp").

Other accessories that are not supplied can be purchased separately from the After-sales Service.

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use and resistant to oven temperatures.

Metallic containers for food or drink should never be used during microwave cooking.

Always ensure that foods and accessories do not come into contact with the inside walls of the oven.

Always ensure that the turntable is able to turn freely before starting the oven. Take care not to unseat the turntable whilst inserting or removing other accessories.

FUNCTIONS



For quickly cooking and reheating food or

POWER	RECOMMENDED FOR	
750 W	Quickly reheating drinks or other foods with a high water content or meat and vegetables.	
500 W	Cooking fish, meaty sauces, or sauces containing cheese or egg. Finishing off meat pies or pasta bakes.	
350 W	Slow, gently cooking. Perfect for melting butter or chocolate.	
160 W	Defrosting frozen food or softening butter and cheese.	
0 W	When using the timer only	

₽www

Download the Use and Care Guide at www.hotpoint.eu for more information

DYNAMIC CRISP

For perfectly browning a dish, both on the top and bottom of the food. This function must only be used with the special crisp plate.

RECOMMENDED FOR
Cookies (8- 10 pieces)
Frozen pizza (350 g)
Sponge cake (500 g)
Fish fingers (8 pieces)
Pizza (350 g)
French fries (200 g - 300g)
Quiche Lorraine (500 g)

Required accessories: Crisp plate, handle for the crisp plate

GRILL

For browning, grilling and gratins when used alone. We recommend turning the food during cooking. For best results, preheat the grill for 3-5 minutes. For quickly cooking and gratinating dishes, combines with microwaves.

POWER	DURATION (min)	RECOMMENDED FOR
500 W	14 - 18	Lasagne (400 - 500 g)
500 W	10 - 14	Fish (600 g)
500 W	40 - 50	Chicken (whole; 1-1.2 kg)
350 W	15 - 18	Fish gratin (600 g)
0 W	-	Browning only

Recommended accessories: wire shelf

V	DYNAMIC DEFROST
$\overline{}$	DINAMIC DEI NOST

For quickly defrosting food such as meat, poultry and fish weighing between 100 g and 2 kg. Food should be placed directly onto the glass turntable. Turn the food when prompted.

DAILY USE

. SELECT A FUNCTION

Simply press the button for the function you require to select it.

. SET THE LENGTH

A After selecting the function you require, use △ or ☑ to set the length for it to run.

The time can be changed during cooking by pressing \square or \square or by increasing the length for 30 seconds each time by pressing \triangleright

. SET THE POWER OF THE MICROWAVE

Press as many times as required to select the power level for the microwave.

To use the microwave in combination with the grill, select the "Grill" function by pressing and then use to set the microwave power.

Please note: You can also change this setting during cooking by pressing

DYNAMIC DEFROST

Press ₹, then use △ or ☑ to set the weight of the food.

During defrosting, the function will pause briefly to allow you to turn the food.

Once the operation is complete, close the door and press ▷.

. ACTIVATE THE FUNCTION

Once you have applied the settings you require, press betto activate the function.

You can press $\ \square$ at any time to pause the function that is currently active.

. SAFETY LOCK

This function is automatically activated to prevent the oven from being switched on accidentally. Open and close the door, then press to start the function.

. PAUSE

To pause an active function, for example to stir or turn the food, simply open the door. To start it up again, close the door and press

. JET START

When the oven is switched off, press > to activate cooking with the microwave function set at full power (750 W) for 30 seconds.

Every time the > button is pressed again, the cooking time will be increased by a further 30 seconds.

. SET THE TIME

☐ ☐ ☐ ☐ ☐ With the oven switched off, press ☐ until the two digits for the hour (on the left) starting flashing.

Use \square or \square to set the correct hour and press \square to confirm: The minutes will flash on the display. Use \square or \square to set the minutes and press \square to confirm.

Please note: You may need to set the time again following lengthy power outages.

. TIMER

When the oven is switched off, the display can be used as a timer. To activate the function and set the length of time you require, use △ or ☑. Press ► to set the power to 0 W, then press ▷ to activate the countdown.

Please note: The timer does not activate any of the cooking cycles.

To stop the timer at any time, press \square

Download the Use and Care Guide from **www.hotpoint.eu** for helpful cooking tables and the table of tested recipes, compiled for the certification authorities in accordance with standards IEC 60705 and IEC 60350.

CLEANING

Do not use steam cleaners.

Do not use wire wool, abrasive scourers or abrasive/corrosive cleaning agents, as these could damage the surfaces of the appliance.

INTERIOR AND EXTERIOR SURFACES

- Clean the surfaces with a damp cloth. If they are very dirty, add a few drops of pH-neutral detergent. Finish off with a dry cloth.
- Clean the glass in the door with a suitable liquid detergent.
- At regular intervals, or in case of spills, remove the turntable and its support to clean the bottom of the oven, removing all food residue. The grill does not need to be cleaned as the intense heat burns away any dirt. Use this function on a regular basis.

ACCESSORIES

All accessories are dishwasher safe with the exception of the crisp plate.

The crisp plate should be cleaned using water and a mild detergent. For stubborn dirt, rub gently with a cloth. Always leave the crisp plate to cool down before cleaning.

TROUBLESHOO	TING	T www	Download the Use and Care Guide at www.hotpoint.eu for more information
Problem	Possible cause	Solut	ion


Problem	Possible cause	Solution
The oven does not work	Power cut. Disconnection from the mains.	Check for the presence of mains electrical power and whether the oven is connected to the electricity supply. Turn off the oven and restart it to see if the fault persists.
The display is showing "Err".	Software fault.	Contact you nearest After-sales Service Centre and state the letter or number that follows "Err".

TECHNICAL SPECIFICATION

Ewww A complete specification for the product, including energy efficiency ratings, can be downloaded from our website www.hotpoint.eu

HOW TO OBTAIN THE USE AND CARE GUIDE
 
> **Download the Use and Care Guide from our website www.hotpoint.eu (you can use this QR code), specifying the product's commercial code.





CONTACTING OUR AFTER-SALES SERVICE

You can find our contact details in the warranty manual. When contacting our After-sales Service, please state the codes provided on your product's identification plate.







 
Printed in Ital

COFFEE MACHINE



NESCAFÉ. DOLCE GUSTO.







Gama de producto
Gama de Produtos
Gamma di prodotti


Productassortiment

κάμα προϊόντων







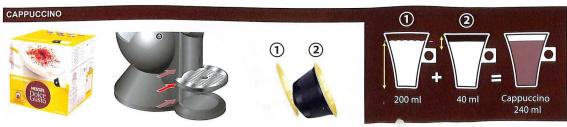






NESCAFÉ. Dolçe Gusto.



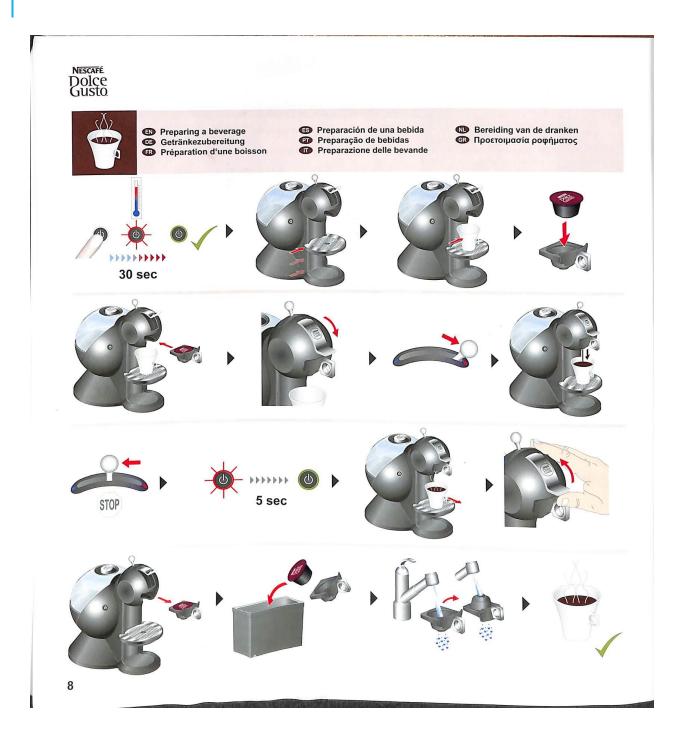

NESCAFÉ. Dolce Gusto.











NESCAFÉ. Dolce



- Economy mode
 Stromsparmodus Mode Eco
- Modo Económico
 Modo Económico
 Modalità Eco
- Stroombesparingsmodus Οικονομική λειτουργία

EN Standard setting - economy mode activated

DE Standardeinstellung - Stromsparmodus aktiv

FR Réglage standard - mode économique activé

ES Ajuste estándar - modo económico activado

PT Confriguração normal - modo economia activado

Configurazione standard - modo economia attivato

NL Standaardinstelling - zuinige modus geactiveerd

GR Στάνταρ ρύθμιση - Λειτουργία οικονομίας ενεργοποιημένη





EN Deactivate economy mode

DE Stromsparmodus deaktivieren

FR Désactiver le mode économique

ES Desactivar modo económico

PT Desactivar modo economia

Disattivare modo economia

N Zuinige modus deactiveren

GR Απενεργοποίηση λειτουργίας οικονομίας



EN Reactivate economy mode

DE Stromsparmodus wieder aktivieren

FR Réactiver le mode économique

 
ES Reactivar modo automático

PII Reactivar modo economia


Riattivare modo economia

NL Zuinige modus heractiveren

Επανενεργοποίηση λειτουργίας οικονομίας



NESCAFÉ. Dolce Gusto

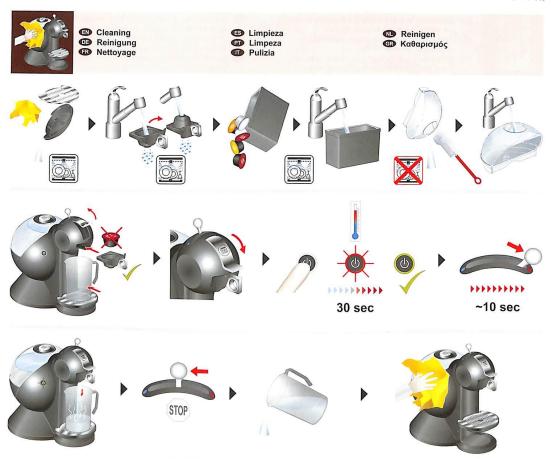

5. QUICK USER GUIDE

This washing machine automatically adjusts the level of the water to the type and quantity of washing. This system gives a reduction in energy consumption and a saving in washing times.

Program selection

- Turn on the washing machine and select the required program.
- Adjust the washing temperature if necessary and press the required "option" buttons.

DRYING

If you would like the drying cycle to begin automatically after washing, select the programme required using the DRYING SELECTION button. Or you can finish the wash and then select the drying programme and load size.

- Press the START/PAUSE button to start washing
- At the end of the programme, the message "End" will appear on the display or, on some models, all wash stage F TEMPERATURE SELECTION indicator lights will turn on.

Wait until the DOOR LOCKED light has gone out before opening the door.

Turn off the washing machine.

For any type of wash, see the program table and follow the operating sequence as indicated.

Technical data


Water pressure:

min 0.05 Mpa / max 0.8 Mpa (0.05 MPa dispenses approximately 1 litre O TEMPERATURE SELECTION of water in 10 seconds)

Spin r.p.m.: See rating plate.

Power input / Power current fuse amp / Supply voltage: See rating plate.

6. CONTROLS AND **PROGRAMS**

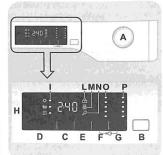

- A Programme selector with OFF
- **B START/PAUSE button**
- C DELAY START button
- D DRYING SELECTION button
- E RAPID / STAIN LEVEL button
- button
- G SPIN SPEED button

F+G KEY LOCK

- H Digital display
- I DRYING SELECTION indicator
- L DOOR LOCKED indicator light
- M KG MODE indicator light
- N KEY LOCK indicator light
- indicator lights
- P SPIN SPEED indicator lights

PROGRAMME selector with OFF position

When the programme selector is turned the display lights up to show the settings for the programme selected.

For energy saving, at the end of the cycle or with an inactivity period, the display level contrast will decrease.

N.B.: To switch the machine off, turn the programme selector to the OFF position.

- Press the START/PAUSE button to start the selected cycle.
- Once a programme is selected the programme selector remains stationary on the selected programme till cycle ends.
- "End" will appear in the display at the end of the program and the DOOR LOCKED light will go off, it is now possible to open the door.
- Switch off the washing machine by turning the selector to OFF.

The programme selector must be returned to the OFF position at the end of each cycle or when starting a subsequent wash cycle prior to the next programme being selected and started.

START/PAUSE button

Close the door BEFORE selecting the button START/PAUSE.

Press to start the selected cycle.

When the START/PAUSE button has been pressed, the appliance can take few seconds before it starts working.

ADD OR REMOVE ITEMS AFTER THE PROGRAMMES HAS STARTED (PAUSE)

- Press and hold the START/PAUSE button for about 2 seconds (some indicator light and the time remaining indicator will flash, showing that the machine has been paused).
- Wait until the DOOR LOCKED light has gone out before opening the door.

Before you open the door, please check water level is below the door opening to avoid flooding.

 After you have added or removed items, close the door and press the START/PAUSE button (the programme will start from where it left off).

CANCELLING THE PROGRAMME

- To cancel the programme, set the selector to the OFF position.
- Wait 2 minutes until the safety device unlocks the door.

DELAY START button

- This button allows you to pre-programme the wash cycle to delay the start of the cycle for up to 24 hours.
- To delay the start use the following procedure:
- Select the required programme.

Z.

- Press the delay start button once to activate it (h00 appears on the display) and then press it again to set a 1 hour delay (h01 appears on the display). The pre-set delay increases by 1 hour each time the button is pressed, until h24 appears on the display, at which point pressing the button again will reset the delay start to zero.
- Confirm by pressing the START/PAUSE button. The delay countdown will begin and when it has finished the programme will start automatically.
- It is possible to cancel the delay start by turning the programme selector to OFF.

If there is any break in the power supply while the machine is operating, a special memory stores the selected programme and, when the power is restored, it continues where it left OFF.

The option buttons should be selected before pressing the START/PAUSE button. If an option is selected that is not compatible with the selected programme then the option indicator light first flashes and then goes off.

DRYING SELECTION button

 For automatic washing/drying cycle: after the selection of washing programme according to laundry type, select a degree of dryness by pressing this button. At the end of the washing programme, the selected drying cycle will start automatically.

If a washing programme is not compatible with automatic drying selected, this function will not be activated. If you exceed the maximum dryable load of laundry indicated in the programme table, the laundry may not be dried satisfactory.

- If you want delete the selection before the programme starts, please press repeatedly the button until the lights go off or reposition the programme selector to the OFF position.
- Drying only cycle: select via the knob the desired drying programme in conjunction with your fabrics, by pressing this button it is possible to select a degree of dryness that is different to the default one (except for the wool drying programme).
- To cancel the cycle during the drying phase, please press the button for about 3 seconds.

WARNING:

After cancelling the drying programme, the cool down phase will begin and please wait for about 10/20 minutes before opening the door.

"End" will appear in the display at the end of the program and the DOOR LOCKED light will go off, it is now possible to open the door.

It is also possible to cancel the drying cycle by turning the programme selector to the OFF position. It is necessary to wait for the cooling phase's end (10/20 minutes) and the DOOR LOCKED light to go off before opening the door.

RAPID / STAIN LEVEL button

This button allows you to choose between two different options, depending on the selected programme.

- RAPID

The button becomes active when you select the RAPID (14/30/44 Min.) programme on the knob and allows you to select one of three durations indicated.

- STAIN LEVEL button

- Once the programme has been selected the wash time set for that programme will be automatically shown.
- This option allows you to choose between 3 levels of wash intensity modifying the length of the programme, depending on how much the fabrics are soiled (can only be used on some programmes as shown in the table of programmes).

TEMPERATURE SELECTION button

- This button allows you to change the temperature of the wash cycles.
- It is not possible to raise the temperature over the maximum allowed for the programme, in order to protect the fabrics.
- If you want carry out a cold wash all the indicators must be off.

SPIN SPEED button

- By pressing this button, it is possible to reduce the maximum speed, and if you wish, the spin cycle can be cancelled.
- If the label does not indicate specific information, it is possible to use the maximum spin expected in the program.

not possible to increase the speed over the maximum allowed for the programme.

To prevent damage to the fabrics, it is

- To reactivate the spin cycle press the button until you reach the spin speed you would like to set.
- It is possible to modify the spin speed without pausing the machine.

An over dosing of detergent can cause excessive foaming. If the appliance detects the presence of excessive foam, it may exclude the spinning phase or extend the duration of the program and increase water consumption.

 
The machine is fitted with a special electronic device, which prevents the spin cycle should the load be unbalanced. This reduces the noise and vibration in the machine and so prolongs the life of your machine.

KEY LOCK

- Pressing simultaneously the buttons TEMPERATURE SELECTION and SPIN SPEED for about 3 seconds, the machine allows you to lock the keys. In this way, you can avoid making accidental or unwanted changes if a button on the display is pressed accidently during a cycle.
- The key lock can be simply cancelled by pressing the two buttons simultaneously again or turning off the appliance.

Digital Display

The display's indicator system allows you to be constantly informed about the status of the machine.



1) DRYING SELECTION INDICATOR LIGHTS

The indicators display the degrees of dryness that can be selected by the relevant button:

EXTRA DRY

(suitable for towels, bathrobes and bulky loads).

IRON DRY

(that leaves the laundry ready for ironing).

CUPBOARD DRY

(for items that will be put away without ironing).

2) CYCLE DURATION

- When a programme is selected the display automatically shows the typical cycle duration, which can vary, depending on the options selected.
- During the initial filling phase of the cycle the machine calculates the actual cycle time needed based on the load size. content and options selected. The real time of the wash will then be displayed. This time can recaulculate during the wash depending on detergent levels and load balancing.

3) DOOR LOCKED INDICATOR LIGHT

• The indicator light is illuminated when the door is fully closed.

Close the door BEFORE selecting the START/PAUSE button.

When START/PAUSE is pressed on the machine with the door closed, the indicator will flash momentarily and then illuminate.

If the door is not properly closed, the light will continue to flash for about 7 seconds, after which the start command will be automatically cancelled. In this case, close the door in the proper way and press the START/PAUSE button.

- Wait until the DOOR LOCKED light has gone out before opening the door.
- 4) Kg Mode INDICATOR LIGHT (function active only on certain programmes)
- During the first minutes of the cycle, the "Kg Mode" indicator will remain on while the intelligent sensor will weigh the laundry and adjust the cycle time, water and electricity consumption accordingly.
- Through every wash phase "Kg Mode" allows to monitor information on the wash load in the drum and in the first minutes of the wash it:
- adjusts the amount of water required;
- determines the length of the wash cycle;
- controls rinsing according to the type of fabric selected to be washed it;

- adjusts the rhythm of drum rotation for 6) WASH TEMPERATURE INDICATOR the type of fabric being washed;
- recognises the presence of too much soap suds, and if necessary, adjust the amount of rinse water.
- adjusts the spin speed according to the load, thus avoiding any imbalance.

5) KEY LOCK INDICATOR LIGHT

The indicator light show that the keys are

LIGHTS


This shows the washing temperature of the selected programme that can be changed (where allowed) by the relevant button. If you want carry out a cold wash all the indicators must be off.

7) SPIN SPEED INDICATOR LIGHTS

This shows the spin speed of the selected programme, that can be reduced or omitted by the relevant button.

Table of programmes

PROGRAMME			(se	kg e cont	(MA)			n°C	2	88	2
		6+4kg	6 +5kg	7+5kg	0 +5kg	0 + 6 kg	9+6kg	(MAX.)	2	88	1
Mixed All In One	2) 4)	3	3	3,5	4	4	4,5	40°	•	•	arest to the
All Hygiene	4)	4	4	4,5	5,5	5,5	6	60°	•	•	
All In One 59 Min.	4)	6	6	7	8	8	9	40°		•	
	14'	1	1	1	1,5	1,5	1,5	30°	•	•	
Rapid ^{3) 4)} 14-30-44 Min.	30'	2	2	2,5	2,5	2,5	2,5	30°	•	•	
	44'	3	3	3,5	3,5	3,5	3,5	40°	•	•	
Whites	2) 4)	6	6	7	8	8	9	90°		•	
Cottons + Prewash	2) 4)	6	6	7	8	8	9	60°	•	•	•
Cottons**	2) 4)	6	6	7	8	8	9	60°	•	•	
Rinse				-	-	-	-	-	Δ	•	
Drain & Spin		-		-	-		-	-			
Delicates		2	2	2,5	2,5	2,5	2,5	40°		•	
Hand & Silk		1	1	1	2	2	2	30°	0	•	
Wool		1	1	1	2	2	2	40°	•	•	
Dry Wool		1	1	1	1	1	1	-	e seprence	antinutari	ence of
Low Heat (drying)		3	3	3,5	4	4	4,5				
High Heat (drying)		4	5	5	5	6	6	-			

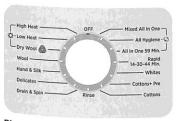

Please read these notes:

* Maximum load capacity of dry clothes, according to the model used (see control panel).

△ (Only for models with liquid detergent compartment)

When only a limited number of articles have stains which require treatment with liquid bleaching agents, preliminary removal of stain can be carried out in the washing machine.

Pour the bleach into the liquid bleach container, inserted into the compartment marked "2" in the detergent drawer, and set the special programme RINSE.

When this phase has terminated, turn the programme selector to the OFF position, add the rest of the fabrics and proceed with a normal wash on the most suitable programme.

- When a programme is selected, on the display is shown the display shows the recommended wash temperature that can be reduced (where allowed) by the relevant button.
- For the programmes shown you can adjust the duration and intensity of the wash using the STAIN LEVEL button.

- Selecting the RAPID program on the knob, it will be possible to select with the RAPID button, one of the three rapid programs available among 14', 30' and 44'.
- Programmes for automatic drying.

INFORMATION FOR THE TEST LABORATORIES (Ref. EN 50229 Standards)

Washing

Use the programme ** with the maximum degree of soiling selected, maximum spin speed and a temperature of 60°C. Programme recommended also for test with a lower temperature.

Drying

First drying with A kg (a load consist: pillowcases and hand-towels) selecting the cotton drying programme (☆ High Heat) cupboard dry (土).

Second drying with B kg (a load consist: sheets and hand towels) selecting the cotton drying programme (A High Heat) cupboard dry (田).

Capacity	A (kg)	B (kg)	
(washing) (kg)	First drying	Second drying	
6	4	2	
6	5	1	
7	5	2	
8	5	3	
8	6	2	
9	6	3	

WASHING

ALL IN ONE technology

This washing machine is equipped with an innovative system with an high pressure jet that sprays a mixture of water and detergent directly into the load. The special motor movement used in this machine manages the drum movement during the start up of each programme, in conjunction with the high pressure jet spraying the detergent mixture into the load, the cycle includes a set of spin actions that helps the detergent solution to penetrate into the fibers, helping dirt removal and ensuring the best available wash performance. The ALL IN ONE system is also used during the water load phases where the high pressure jet aids the complete removal of detergent residues trapped in the clothes.

Mixed All In One

This programme allows you to wash different type's fabrics and different colours all together. The rotational movement of the drum and the water levels are optimized during the washing and rinsing phases. The accurate spin action, ensures a reduced formation of creases in the fabrics. Thanks to ALL IN ONE technology, a complete washing cycle optimization is possible

IMPORTANT WASH PERFORMANCE ADVICE:

- New, coloured garments should be washed separately for at least 5 or 6 washes
- Certain large dark items such as jeans and towels should always be washed separately
- Never mix NON COLOURFAST fabrics.

All Hygiene

This programme ensures a deep cleaning, an effective sanitizing and anti-allergic action thanks to an optimized cycle in terms of temperature and rinse cycles, eliminating allergens and detergent residues. Ideal for people with sensitive skin. It is suitable for cotton garments, washed at 60°C temperature and is suggested for a reduced

All In One 59 Min.

This specially designed programme maintains the high quality wash performance whilst greatly reducing the wash time. The programme is designed for a reduced load (see table of programmes).

Rapid (14-30-44 Min.)

Washing cycle suggested for low loads and slightly dirty. With this program it is recommended to reduce the quantity of detergent normally used, in order to avoid unnecessary waste. Selecting the RAPID program and acting on the button you can choose one of three programs available.

Whites

An intensive wash. The final spin at maximum speed gives more efficient

Cottons + Prewash

This programme has been designed to remove the stronger stains from cotton white clothes. The prewash guarantees the tough dirt removal. Add into compartment "1" a quantity of detergent equal to 20% of that used for main wash.

Cottons

This program is suitable to clean normally soiled cotton laundry and it is the most efficient program in terms of combined energy and water consumptions for washing cotton laundry.

This program performs 3 rinses with an intermediate spin (which can be reduced or excluded by using the appropriate button) . It is used for rinsing any type of fabric, for example after a wash carried out by hand.

Drain & Spin

The program completes the drain and a maximum spin. It is possible to delete or reduce the spin with the SPIN SPEED button.

Delicates

This program has reduced periods of drum rotation during the cycle and is particularly suitable or washing delicate fabrics. The wash cycle and rinses are carried out with a high level of water to ensure the best performance.

Hand & Silk

This programme allows a delicate washing cycle for garments specified as "Hand Wash only" and laundry items made from Silk or specified as "Wash as Silk" on the fabric label.

Wool

This program performs a wash cycle dedicated to the wool fabrics that can be Washed in a washing machine, or the articles to be washed by hand.

DRYING

WARNING:

Dispensers used for concentrated powders and liquid detergents must be removed from the drum before commencing the tumble drying programmes.

The drum changes direction during the drying cycle to prevent the laundry from tangling and producing even more drying. Cool air is used during the last 10/20 minutes of the drying cycle to minimize creasing.

Dry Wool

Low temperature drying programme, ideal to dry woollen clothes with maximum care and softness, reducing rubbing of fabrics and avoid possible felting. It's suggested to reverse clothing before drying. Timing is related to the to the amount of the washing and the spin Speed selected for the wash. The cycle is suitable for small loads up to 1 kg (3 sweaters).



APPAREL CARE

The wool drying cycle of this machine has been approved by "The Woolmark Company" for the drying of machine washable wool products provided that the products are washed and dried according to the instructions on the garment label and those issues by the manufacturer of this machine.

In UK, Eire, Hong Kong and India the Woolmark trade mark is a Certification trade mark.

Mixed (Low Heat)

drying programme Low temperature recommended for synthetics and mixed fibres (always refer to the laundry care label).

Cottons (High Heat)

High temperature drying programme recommended for cottons and linen items (always refer to the laundry care label).

7. DRYING CYCLE

- Drying guidance advice is general, but practical experience of using the product will help you to achieve the best drying results.
- We recommend setting a lower drying time than indicated, when first using the appliance in order to establish the degree of dryness required.
- •We recommend not drying fabrics that fray easily, such as rugs or garments with a deep pile, in order to avoid air duct
- We recommend that you sort the laundry by the following methods:
- By drying care symbols, which are displayed on the clothing labels
- Suitable for tumble drying.
- 0 Tumble dry at high temperature.
- Tumble dry at low temperature only. 0
- \boxtimes DO NOT tumble dry.

If the fabric does not have a care label, you should assume that it is not suitable for drying.

- By size and thickness

Whenever the wash load is bigger than the drying capacity, separate the clothes according to thickness (e.g. towels from

- By fabric type

Cottons/linen: towels, cotton jersey, bed

Synthetics: blouses, shirts, overalls, etc. made of polyester or polyamide, as well as for cotton/synthetic mixes.

Only dry pre-spun laundry.

The correct way to dry

- Open the door.
- Fill with the laundry, not exceeding the maximum drying load indicated in the programme table. For large items (e.g. sheets) or very absorbent items (e.g. towels or jeans), it is a good idea to reduce the load.
- Close the door.
- Turn the programme dial to the more suitable drying programme for your laundry.
- The washer dryer can perform the following types of drying:

Dry Wool

- Low temperature drying programme recommended for wool fabrics.

☆ Low Heat

- Low temperature drying programme recommended for mixed fabrics (synthetics/cotton) synthetic fabrics.

High Heat

- High temperature drying programme recommended for cotton, terry toweling, linen, hemp fabrics, etc....
- Select the degree of dryness that you require:
- EXTRA DRY (suitable for towels, bathrobes and bulky loads).
- IRON DRY (that leaves the laundry ready for ironing).
- CUPBOARD DRY \mathbb{E} (for items that will be put away without ironing).

By selecting the wool drying programme, it's not possible to select a degree of dryness different from the default one.

- The washer dryer will calculate the time needed for drying and the level of moisture remaining in the laundry, according to the load and drying type selected.
- Check that the tap is turned on and that the discharge hose is positioned correctly.

WARNING:

Do not dry articles with special padding (e.g. quilts, quilted anoraks, etc.) and very delicate fabrics. If garments are drip/dry, load less items to prevent creasing.

Press the START/PAUSE button (the display will show the drying time remaining).

The appliance calculates the time to the end of the selected programme based upon a standard loading. During the cycle, the appliance corrects the time according to the size and composition of the load.

During the drying phase the drum will accelerate to a higher speed to distribute the load and to optimize the drying performance.

When the programme is finished the word End" will appear on the display. After 5 minutes the appliance will go into standby mode (on certain models, the display will show two lines).

- Switch off the machine by turning the programme selector to the OFF position.
- Open the door and remove the laundry.
- Turn off the tap.

CANCELLING THE DRYING PROGRAMME

To cancel the drying programme, press and hold the DRYING SELECTION button for about 3 seconds.

WARNING:

After cancelling the drying programme, the cool down phase will begin and you must wait for about 10/20 minutes before opening the door.

In order to ensure the correct operation of the appliance, it is advisable not to interrupt the drying phase unless it is absolutely necessary.

8. AUTOMATIC WASHING/DRYING CYCLE

You cannot exceed the maximum dryable load of laundry indicated in the programme table, otherwise the laundry will not be dried satisfactory.

- Washing

- Open the drawer and put in the correct amount of detergent.
- Refer to the list of washing programmes for the fabrics to be washed (e.g. very dirty cotton) and turn the selector knob to the required programme.
- Adjust the wash temperature if necessary.
- Press the option buttons (if required).
- Check that the tap is turned on and that the discharge hose is positioned

- Drying

• Select the degree of dryness that you

EXTRA DRY

(suitable for towels, bathrobes and In order to ensure the correct operation bulky loads).

IRON DRY

(that leaves the laundry ready for ironing).

CUPBOARD DRY

(for items that will be put away without ironing).

By selecting the wool programme, only the default degree of dryness is

Press the START/PAUSE button.

- At the end of the wash phase the display will show the drying time remaining.
- When the programme is finished the word "End" will appear on the display. After 5 minutes the appliance will go into standby mode (on certain models, the display will show two lines).
- Switch off the machine by turning the programme selector to the OFF position.
- Open the door and remove the laundry.
- Turn off the tap.

CANCELLING THE DRYING PROGRAMME

● To cancel the drying programme, press and hold the DRYING SELECTION button for about 3 seconds.

WARNING:

After cancelling the drying programme, the cool down phase will begin and you must wait for about 10/20 minutes before opening the door.

of the appliance, it is advisable not to interrupt the drying phase unless it is absolutely necessary.

9. THROUBLESHOOTING AND WARRANTY

If you believe the washing machine is not working correctly, consult the quick guide Provided below which includes some practical tips on how to fix the most common

FOR ONE TOUCH MODELS

The Hoover Wizard app has a Clever Check-up function that allows you to confirm the functionality and status of the product at any time. To use the Hoover Wizard app will need an Android smartphone with NFC technology. More info can be found on the App.

If the display of the machine is showing an error (by a code or blinking LEDs), you should with NFC on. should turn on the App on your Android smartphone, with NFC on. Place your smart phone against the One Touch logo on the control panel. You should now be able to be able to read the fault directory to solve the issue.

ERROR CODE FORMAT

• Models with a display: the error is shown by a number preceded by the letter "E" (example: E2 = Error 2).

• Models without display: an error is shown by a sequence of flashes of every LED. The error code is shown by the number of flashes followed by a pause of 5 seconds (example: two flashes – pause 5 seconds – two flashes – repeating = Error 2).


Error shown	Possible causes and practical solutions
E2 (with display) 2 flashes of the LEDs (without display)	The machine cannot load water.
	Make sure the water supply tap is open.
	Make sure the water supply hose isn't bent, kinked or trapped. Make sure the water supply hose isn't bent, kinked or trapped.
F2 (Close the water supply tap, unscrew the line income the supply tap, unscrew the line income in the washing machine and make sure the "anti-sand" filter is clean the washing table leads to the latest the latest table to the latest table
E3 (with display)	The washing machine does not drain water.
(without display)	Make sure the filter is not clogged. Make sure the drain hose isn't bent, kinked or trapped. Make sure the home drainage system is not blocked and is allowing without better the filter than the system is not blocked and is allowing the system of the sy
E4 (with display)	There is too much foam and/or water.
(without die LEDs	Ensure the correct amount of detergent is being used and the detergent is designed for use in a washing machine.
E7 (with display) 7 flashes of its	Door problem.
7 flashes of the LEDs (without display)	Make sure the door is correctly closed. Make sure the clothes inside the drum are not preventing the door
	from closing fully.
Any osh	from closing fully. If the door is locked, turn off and unplug the washing machine from the electrical supply socket, wait 2-3 minutes and reopen the door, the electrical supply socket, wait a minute. Turn on the content of the properties of the
Any other code	the electrical supply socket, wait 2-3 minutes and orbit. Turn off and unplug the washing machine, wait a minute. Turn on the machine and restart a program. If the error occurs again contact an Authorised Customer Service Centre directly.

DISHWASHER

4.8. Filling the detergent

Push the latch to open the dispenser and pour in the detergent.

 Close the lid and press it until it locks in place. The dispenser should be refilled just before the start of each programme. If the dishes are heavily soiled, place additional detergent in the pre-wash detergent chamber.



4.9. Using combined detergents

These products should be used according to the manufacturer's instructions.

Never put combined detergents into the interior section or the cutlery basket.

Combined detergents contain not only the detergent but also rinse-aid, salt replacement substances and additional components depending on the combination. We recommend you do not use combined detergents in short programmes. Please use powder detergents in such

programmes.

If you encounter problems when using combined detergents, please contact the detergent manufacturer.

When you stop using combined detergents, make sure that water hardness and rinse aid settings are set to the correct level.

4.10. Rinse-aid usage

Rinse-aid makes dishes sparkle and helps them to dry without spotting. Rinse-aid is required for stain-free utensils and clear glasses. Use only rinse-aid domestic dishwashers.

4.11. Filling the rinse-aid and setting

 
To fill the rinse aid compartment, open the rinse-aid compartment cap. Fill the compartment with rinse aid to the MAX level and then close the cap. Be careful not to overfill the rinse aid compartment and wipe up any spills.

In order to change the rinse aid level, follow the below steps before turning on the machine:

- Push the programme button and hold it down.
- Turn on the machine.
- Hold down the programme button until "rA" disappears from the display. Rinse aid setting follows water hardness setting.
- The machine will display the current setting.
- Change level by pushing the programme button.
- Switch off the machine to save the setting.

The factory setting is "4".

If the dishes are not drying properly or are spotted, increase the level. If blue stains form on your dishes, decrease the level.



Brightener Dose	
	Indicator
dispensed	r1 is shown on the
1 dose is	display.
	r2 is shown on the display.
2 doses are	
	r3 is shown on the display.
3 doses are dispensed	r4 is shown on the
	display.
dispensed	r5 is shown on the
	1 dose is dispensed 2 doses are dispensed 3 doses are dispensed 4 doses are

5. LOADING YOUR DISHWASHER

For best results, follow these loading

We recommend that you place large items (pots, pans, lids, plates and bowls) which are heavily soiled in the lower basket.

 
The upper basket is designed for delicate and lighter dishware such as glasses, coffee and tea cups and saucers. Position the dishes so that they will not get moved by the spray of water.

Cutlery should be placed in the cutlery basket. Items should be loaded individually into the appropriate slots with their handles downwards. Long utensils should be placed horizontally on the baskets.

WARNING: Take care not to obstruct the rotation of spray arms.

5.1. Recommendations

Remove any coarse residue on dishes before placing the dishes in the machine. Start the machine with full load.



warning: Always place sharp utensils with the sharp point down and open utensils with their openings down.


SOFT TOUCH Top basket

Height Adjustable Rack

These racks are designed to increase the capacity of the top basket. You can place your glasses and cups on the racks. You can adjust the height of these racks. Thanks to this feature, you can place different sizes of glasses under these racks.

Thanks to height adjustment plastics mounted on the basket, you can use your racks in 2 different heights. In addition, you can place long forks, knives and spoons on these racks laterally, so that they do not block the revolution of propeller. The soft touch feature on the racks serves

The soft touch feature on the racks serves to place the fine stemmed glass. The wineglass is placed in the area shown at the picture.

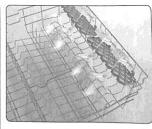


Foldable racks

Foldable racks on the upper basket are designed in order to let you place big items easier such as pots, pans, etc. If requested, each part can be folded separately, or all of them can be folded and larger spaces can be obtained. You can use foldable racks by raising them upwards,or by folding down.



Height adjustment

 
The upper basket includes a mechanism which enables the height of the basket to be adjusted up (1) or down (2) without having to remove the basket. Hold the basket on both sides and pull it up or push it down, ensuring both sides of the upper basket are in the same position.



4.8. Filling the detergent

Push the latch to open the dispenser and pour in the detergent.

 Close the lid and press it until it locks in place. The dispenser should be refilled just before the start of each programme. If the dishes are heavily soiled, place additional detergent in the pre-wash detergent chamber.



4.9. Using combined detergents

These products should be used according to the manufacturer's instructions.

Never put combined detergents into the interior section or the cutlery basket.

Combined detergents contain not only the detergent but also rinse-aid, salt replacement substances and additional components depending on the combination.

We recommend you do not use combined detergents in short programmes. Please use powder detergents in such programmes.

If you encounter problems when using combined detergents, please contact the detergent manufacturer.

When you stop using combined detergents, make sure that water hardness and rinse aid settings are set to the correct level.

4.10. Rinse-aid usage

Rinse-aid makes dishes sparkle and helps them to dry without spotting. Rinse-aid is required for stain-free utensils and clear glasses. Use only rinse-aid domestic dishwashers.

4.11. Filling the rinse-aid and setting

 
To fill the rinse aid compartment, open the rinse-aid compartment cap. Fill the compartment with rinse aid to the MAX level and then close the cap. Be careful not to overfill the rinse aid compartment and wipe up any spills.

In order to change the rinse aid level, follow the below steps before turning on the machine:

- Push the programme button and hold it down.
- · Turn on the machine.
- Hold down the programme button until "rA" disappears from the display. Rinse aid setting follows water hardness setting.
- The machine will display the current setting.
- Change level by pushing the programme button.
- Switch off the machine to save the setting.

The factory setting is "4".

If the dishes are not drying properly or are spotted, increase the level. If blue stains form on your dishes, decrease the level.



Level	Brightener Dose	Indicator	
1	Rinse-aid not dispensed	r1 is shown on the display.	
2	1 dose is dispensed	r2 is shown on the display.	
3	2 doses are dispensed	r3 is shown on the display.	
4	3 doses are dispensed	r4 is shown on the display.	
5	4 doses are dispensed	r5 is shown on the display.	

5. LOADING YOUR DISHWASHER

For best results, follow these loading guidelines.

We recommend that you place large items (pots, pans, lids, plates and bowls) which are heavily soiled in the lower basket.

The upper basket is designed for delicate and lighter dishware such as glasses, coffee and tea cups and saucers. Position the dishes so that they will not get moved by the spray of water.

Cutlery should be placed in the cutlery basket. Items should be loaded individually into the appropriate slots with their handles downwards. Long utensils should be placed horizontally on the baskets.

WARNING: Take care not to obstruct the rotation of spray arms.

5.1. Recommendations

Remove any coarse residue on dishes before placing the dishes in the machine. Start the machine with full load.



Do not overload the drawers or place dishes in the wrong basket.

✓! WARNING: Always place sharp utensils with the sharp point down and open utensils with their openings down.

SOFT TOUCH Top basket


Height Adjustable Rack

These racks are designed to increase the capacity of the top basket. You can place your glasses and cups on the racks. You can adjust the height of these racks. Thanks to this feature, you can place different sizes of glasses under these racks.

Thanks to height adjustment plastics mounted on the basket, you can use your racks in 2 different heights. In addition, you can place long forks, knives and spoons on these racks laterally, so that they do not block the revolution of propeller.


The soft touch feature on the racks serves

to place the fine stemmed glass.
The wineglass is placed in the area shown at the picture.

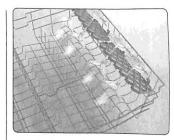


Foldable racks

 
Foldable racks on the upper basket are designed in order to let you place big items easier such as pots, pans, etc. If requested, each part can be folded separately, or all of them can be folded and larger spaces can be obtained. You can use foldable racks by raising them upwards, or by folding down.




Height adjustment

  The upper basket includes a mechanism which enables the height of the basket to be adjusted up (1) or down (2) without having to remove the basket. Hold the basket on both sides and pull it up or push it down, ensuring both sides of the upper basket are in the same position.

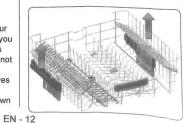





Foldable rack

The upper basket has foldable racks which are designed for larger items, such as pots, pans, etc. Each rack can be folded separately. To use the foldable racks, raise them or fold them down.






5.2. Alternative Basket Loads Lower Basket






Top Basket

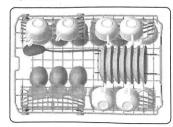

Incorrect Loads

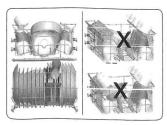

Important Note for Test Laboratories
For detailed information required for tests
according to EN normatives and a softcopy
of the manual, please send the model
name and serial number to the following
address:

dishwasher@standardtest.info

6. PROGRAMME TABLE

Programme	Duration (min)	Description	
Extra Hygiene	124	High-temperature, disinfecting programme for heavily soiled dishes.	
Intensive	115	For heavily soiled dishes.	
Super 50'	50	For normally soiled, daily-used dishes with a faster programme.	
Eco (Reference)	198	Standard programme for normally soiled, daily-used dishes.	
Quick 30'	30	For lightly soiled dishes and a quick wash.	
Prewash	15	To rinse dishes that you plan to wash later.	

NOTE: THE PROGRAMME DURATION MAY CHANGE ACCORDING TO THE AMOUNT OF DISHES, THE WATER TEMPERATURE, THE AMBIENT TEMPERATURE AND SELECTED ADDITIONAL FUNCTIONS.

- · Only use powder detergent for short programmes.
- Short programmes do not include drying.
- · To assist drying, we recommend slightly opening the door after a cycle is complete.

7. THE CONTROL PANEL



Press the Power On/Off button (1), the End Of Programme Indicator (7) will illuminate.

Select the programme most suitable for your dishes using the Programme Selection button (2). The Programme Display will show the number of the selected programme.

Additional features can be selected.

NOTE: Press the Half Load button
(4) to reduce the duration of your selected programme, and therefore decrease your energy and water consumption.

NOTE (only for models with extra features): If an extra feature (4) is used on the most recent wash programme, the feature will remain active on the next programme. To cancel this feature on the newly selected programme, press the relevant feature button until the light on the button switches off.

NOTE: If you decide not to start the selected programme, please see the "Changing a Programme" and "Cancelling a Programme" sections.

NOTE: When there is not enough dishwasher salt, the Salt Lack Warning Indicator (7) will illuminate to indicate the salt chamber needs filling.

NOTE: When there is not enough rinse aid, the Rinse Aid Lack Warning Indicator (7) will illuminate indicating the salt chamber needs filling.


Delaying the Programme

Press the Delay button (5) to delay the start time of the selected programme by 3, 6 or 9 hours. Pressing the button once delays the start time by 3 hours, pressing twice by 6 hours, and pressing a third time by 9 hours. The programme can be selected first and the delay duration after, or vice versa. Press

the Delay button to change or cancel the delayed start. The remaning delay time will show on the display and the corresponding Delay Indicator will be illuminated (3h, 6h, or 9h).

7.1. Changing a Programme


Follow the steps below if you would like to change the programme while in operation.

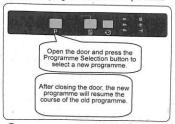

NOTE: Open the door slightly at first to avoid water spillage if you wish to stop the wash programme before it is complete.


7.2. Cancelling a Programme

Follow the steps below if you would like to cancel a programme while in operation.

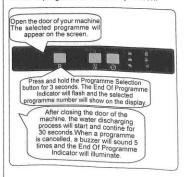

EN - 15

7.3. Switching the Machine Off

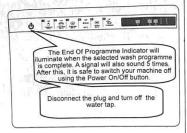

NOTE: Do not open the door before the programme is complete.

NOTE: If the door of the machine is opened or the power is cut off while a programme is in operation, the programme will continue when the door is closed or the power returns

NOTE: If the power is cut off or the machine door is opened during the drying process, the programme will terminate. Your machine will now be ready for a new programme selection.

8. CLEANING AND MAINTENANCE


Cleaning your Dishwasher is important to maintain the machine's service life. Oil and limescale may build up in your Dishwasher over time. If this occurs:

- Fill the detergent compartment but do not load any dishes. Select a programme which runs at high temperature and run the Dishwasher empty. If this does not clean your Dishwasher sufficiently, use a cleaning agent designed for use with dishwashers.
- Wipe the door seals regularly with a damp cloth to remove any accumulated residue.

8.1. Cleaning machine and filters

Clean the filters and spray arms at least once a week. If any food waste remains on the coarse and fine filters, remove them and clean them thoroughly with water.

a) Micro Filterb) Coarse Filterc) Metal Filter

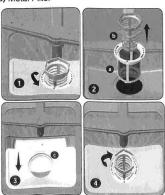

To remove and clean the filter combination, turn it counter clockwise and remove it by lifting it upwards (1). Pull the coarse filter out of the micro filter (2). Then pull and remove the metal filter (3). Rinse the filter with lots of water until it is free of residue. Reassemble

the filters. Replace the filter insert, and rotate it clockwise (4).

- Never use your Dishwasher without a filter.
- Incorrect fitting of the filter will reduce the washing effectiveness.
- Clean filters are necessary for proper running of the machine.

8.2. Spray arms

Make sure that the spray holes are not clogged and that no food waste is stuck to the spray arms. If there is any clogging, remove the spray arms and clean them under water. To remove the upper spray arm undo the nut holding it in position by turning it clockwise and pulling it downwards. Make sure that the nut is properly tightened when refitting the upper spray arm.



EN - 17

9. TROUBLESHOOTING

FAULT	POSSIBLE CAUSE	TROUBLESHOOTING		
7.1	Your Dishwasher is not plugged in.	Plug your Dishwasher in.		
	Your Dishwasher is not switched on.	Switch your Dishwasher on by pressing the On/Off button.		
The programme does	Fuse blown.	Check your indoor fuses. Turn on the water inlet tap.		
not start.	Water inlet tap is closed.			
	Your Dishwasher door is open.	Close the Dishwasher door.		
	Water inlet hose and machine filters are clogged.	Check the water inlet hose and machine filters and make sure they are not clogged.		
	Water drain hose is clogged or twisted.	Check the drain hose, then either clean or untwist it.		
Water remains inside the machine.	The filters are clogged.	Clean the filters.		
	The programme is not finished yet.	Wait until the programme is finished.		
Machine stops during	Power failure.	Check mains power.		
washing.	Water inlet failure.	Check water tap.		
Shaking and hitting noises are heard during a wash operation.	The spray arm is hitting the dishes in the lower basket.	Move or remove items blocking the spray arm.		
	Dishes placed incorrectly, sprayed water not reaching affected dishes.	Do not overload baskets.		
	Dishes leaning against each other.	Place dishes as instructed in the section or loading your dishwasher.		
Partial food wastes	Not enough detergent used.	Use the correct amount of detergent, as instructed in the programme table.		
remain on the dishes.	Wrong wash programme selected.	Use the information in the programme table to select the most appropriate programme		
	Spray arms clogged with food waste.	Clean the holes in the spray arms with thir objects.		
	Filters or water drain pump clogged or filter misplaced.	Check the drain hose and filters are correctly fitted.		


FAULT	POSSIBLE CAUSE	TROUBLESHOOTING	
-	Not enough detergent used.	Use the correct amount of detergent, as instructed in the programme table.	
Whitish stains remains	Rinse aid dosage and/or water softener setting set too low.	Increase rinse aid and/or water softene level.	
on dishes.	High water hardness level.	Increase water softerner level and add sal	
	Salt compartment cap not closed properly.	Check that the salt compartment cap is closed properly.	
	Drying option is not selected.	Select a programme with a drying option.	
Dishes do not dry.	Rinse aid dosage set too low.	Increase rinse aid dosage setting.	
1	Stainless-steel quality of the dishes is insufficient.	Use only dishwasher-proof sets.	
	High level of salt in wash water.	Adjust the water hardness level using water hardness table.	
Rust stains form on the dishes.	Salt compartment cap not closed properly.	Check that the salt compartment cap is closed properly.	
	Too much salt spilled in the Dishwasher while filling it with salt.	Use funnel while filling salt to the compartment to avoid spillage.	
	A poor mains grounding.	Consult a qualified electrician immediately	
Detergent remains in the detergent compartment.	Detergent was added when the detergent compartment was wet.	Make sure detergent compartment is dry before use.	

AUTOMATIC FAULT WARNINGS AND WHAT TO DO

TROUBLE	POSSIBLE FAULT	WHAT TO DO
Car 191		Make sure the water inlet tap is open and water is flowing.
F5	Insufficient water	Separate the inlet hose from the tap and clean the filter of the hose.
19 2 2	ý	Contact for service if the error continues.
F3	Continuous water input	Close the tap and contact for service.
F2 Inability to discharge water		Water discharge hose and filters may be clogged.
	Inability to discharge water	Cancel the program.
	If the error continues, contact for service.	
F8	Heater error	Contact for service.
F1	Overflow	Unplug the machine and close the tap.
101	2.2.00	Contact for service.
F7	Overheating error	Contact for service.
F6	Faulty heater sensor	Contact for service,
FE	Faulty electronic card	Contact for service.

10. PRACTICAL INFORMATION

- 1. When the machine isn't in operation:
- · Disconnect the plug and close the tap.
- · Leave the door slightly open to prevent odour formation.
- 2. Select the dry option to remove water droplets.
- 3. Place dishes in the machine properly to achieve the best energy consumption, washing and drying performance. Please see the programme and consumption table for more information
- 4. Rinse dirty dishes before placing them in the dishwasher.
- 5. Only use the Prewash programme when necessary.
- 6. Do not place the machine near a refrigerator because it will reach high temperatures.
- If the machine is located in an area that is at risk of freezing, close the tap, disconnect
 the inlet hose from the tap and drain the water inside the hose and the machine
 completely.

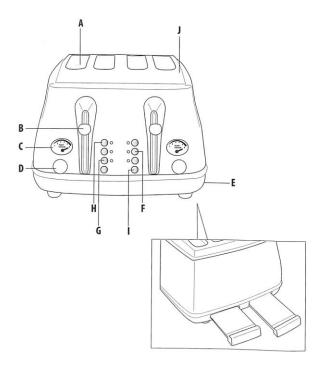

3

IMPORTANT WARNINGS

Safety warnings

Danger!

Failure to observe the warning may result in life threatening injury by electric shock.

- The appliance is exclusively for the use of toasting bread products. Any other use is to be considered inappropriate and therefore dangerous. The manufacturer cannot be held responsible for eventual damage caused by inappropriate, improper or irresponsible use and/or for repairs made to the product by unauthorised personnel.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Before inserting the plug into the socket, ensure that: The voltage of the socket corresponds to the value indicated on the information label, attached to the appliance. The electrical socket is earthed. The manufacturer does not accept any liability if this requirement is not observed.
- The use of adapters, multiple socket units and/or extension cables is not recommended.
- To avoid electric shocks, never let the toaster, cord or plug get wet, and NEVER put your hand or anything metal, e.g. a knife or foil, into the toaster.
- Do not touch the appliance with wet or damp hands.
- Do not use the appliance with bare or wet feet,
- Always unplug the toaster when not in use, before cleaning or attempting to clear jammed bread.

/ Important!

Failure to observe the warning could result in injury or damage to the appliance.

 The appliance is designed and produced for domestic use only. It is not suitable for use in: staff kitchens in shops, offices and other workplaces, farm houses, hotels, motels or other holiday accommodation, guest houses.

- The plastic bag in which the appliance was packaged should be kept out of reach of children as it poses a suffocation hazard.
- This appliance can be used by children aged 8 upwards and by persons with reduced physical, sensory or mental capabilities or who lack of experience and knowledge if they are supervised or have been given instructions concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children unless they are older than 8 and supervised. Keep the appliance and its cord out of the reach of children under 8 years of age.
- Do not unplug the appliance from the outlet by pulling on the cord.
- Do not leave the appliance exposed to the elements, (rain, direct sunlight, frost, etc.).
- Do not immerse the appliance, the plug, or the electrical cable in water.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when opearating your appliance, particularly in the vicinity of young children.
- Details for cleaning refer to cleaning part of user manual.

Danger of burns!!

Failure to observe the warning could result in burns or scalds.

- When the machine is running, the

external surface temperature can be very high. Always use handles or protective gloves if necessary.

- Bread is a foodstuff which may catch fire. Do not use this appliance under or next to curtains or other combustible Before using for the first time material.
- Do not cover the appliance while it is in use, it could overheat and catch fire.
- We recommend that you do not use your toaster directly under wall cupboards.
- Burnt food can catch fire, so never leave your toaster on unattended, and set the browning control lower for thin or dry bread which can burn more easily.
- Never warm food with a topping or filling (e.g. pizza): if it drips into the toaster it could catch fire.
- Clean the crumb tray regularly: crumbs can smoke or burn.

i Please note:

This symbol indicates recommendations and important information for the user.

- After removing the appliance from the packaging, make sure that the product is complete and in perfect condition. Ensure all labels and packaging have been removed from the toaster.
- Remove any dust that may have accumulated on the appliance during transit by dusting it off with a soft dry
- Do not let cord hang over edge of table or counter, or touch hot surfaces (for example the top plate J).

This appliance conforms to EC Regulation 1935/2004 on materials and articles intended to come into contact with food.

Disposing of the appliance

The appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

DESCRIPTION

- A Bread toasting slots
- ON lever
- Browning control window
- Browning control dial
- Crumb collection tray
- Defrost button

- Bagel button
- Stop/cancel button
- J Top plate

- Clip excess cord into the cord storage clips underneath
- As with all new heating elements, your toaster may emit a slight burning or 'new' smell when it is first switched on. This is normal and not a cause for concern.
- Before using for the first time, heat up the empty toaster 3 times at max setting. This will remove possible odours caused by manufacturing processes. Ventilate the room after each cycle.

To use your toaster

- Make sure than the ON levers (B) are at the rest position. Click turn the toasting level dial (D) to the required level
- Connect the appliance to the electrical outlet.
- Insert the slices of bread into the bread toasting slots (A) and lower the lever (B) until it is all the way down. Do not cook or let the bread directly on the top plate (J) as this part is not inteded for cooking purpose.

Please note: If the appliance is not connected to the electrical outlet, the lever (B) will not stay down.

- When the toasting is finished, the lever returns to the rest position, raising the toasted bread slices at the same time. If the lever is accidentally blocked or held down, toaster may not switch off automatically.
- If the bread is not sufficiently toasted, select a darker degree of toasting by turning the browning control dial
- The toasting can be interrupted at any time by pressing the Stop/Cancel button (I).

Never lift the lever (B) to cancel toasting.

Danger of burns!! the bread toasting slots become very hot during operation. Do not touch.

Defrost function

Frozen slices of bread may be toasted by pressing the Defrost button (F) immediately after lowering the lever (B); the toasting cycle will be lengthened in order to achieve the desired browning. The defrost indicator light will remain lit while the defrost function is in use.

Reheat function

To warm toast that has popped up but gone cold, lower the lever (B) again and then press the 'Reheat' button (G). Please note that this is fixed reheat time which cannot be adjusted by the browning control. The reheat function can be cancelled at any time by pressing the Stop/Cancel button (I). The reheat indicator light will remain lit while the reheat function is in

Bagel function

The 'Bagel' function allows for the toasting of bread, bagels and muffins etc on one side only (internal side), while the other (external side) remains warm. Bagels and muffins must be sliced in half before toasting. Press down on the lever (B) and then press the 'Bagel' button (H). The bagel indicator light will remain lit while the bagel function is in use.

Suggestions for use

- Select a lower setting for light browning, for toasting one slice only or for dry bread.
- When toasting a single slice of bread, you may notice a variation in toast colour from one side to the other - this is normal.
- Dry/stale bread toasts more quickly than fresh bread, and thinly sliced bread toasts more quickly than thickly sliced bread. Therefore the browning control should be set at a lower setting than usual.
- For best results ensure that the bread slices are of an even thickness, freshness and size.
- In order to achieve uniform browning we recommend that you wait a minimum of 30 seconds between each toasting so that the heating control can reset. Alternatively select a lower setting when additional toasting is carried out.

Precautions

- Never use the appliance when it is empty (when there is no bread inside) except on first use.
- Do not use very thin or broken slices of bread.
- Do not insert other foods that may drip during the cooking process. In addition to making the cleaning procedure more difficult, these may cause fires.
- Clean the crumb tray regularly: crumbs can smoke or
- Do not insert (by force) foods that are too big for the
- Do not insert forks or other utensils into the toaster in order to remove bread. As well as damaging the toaster, there is a high risk of electric shock.

Should some toast remain blocked in the toaster. remove the plug from the mains, wait for the toaster to cool down until it is safe to touch, then turn the toaster over and shake it gently.

CARE AND CLEANING

Before cleaning, unplug your toaster and let it cool down.

- The outside of the toaster must be cleaned with a damp cloth and using water only. Never use abrasive or flammable liquids cleaning products as they could damage the surface.
- DO NOT IMMERSE IN WATER
- After each use, remove the plug from the electrical outlet and empty the crumb collection tray that is under

Danger! DO NOT TOUCH ANY PART OF THE TOASTER WITH SHARP OR METAL UTENSILS, ESPECIALLY INSIDE THE BREAD TOASTING SLOTS. RISK OF ELECTRIC

TECHNICAL CHARACTERISTICS

Supply voltage Absorbed power See rating label

OPERATION AND FUNCTIONS

Starting up and temperature regulation

Insert the plug of the connection lead into the plug socket with protective earth contact. When the refrigerator compartment door is opened, the internal lighting is switched on.

The temperature selector knob is located on the right side of the refrigerator compartment.

Setting 0 means:

Off.

Turning clockwise in direction Refrigerating unit on, the latter then operating automatically.

Setting 1 means:

Highest temperature, warmest setting.

Setting 7 (end-stop) means:

Lowest temperature, coldest setting,

Important!

Normally we advise you select setting of 2 or 3 or 4, if you want the temperature warmer or colder please turn the knob to lower or higher setting accordingly. When you turn the knob to lower which can lead to the more energy efficiency. Otherwise, it would result the energy-consuming. Important!

High ambient temperatures (e.g. on hot summer days) and a cold setting on the temperature regulator (position 6 to 7) can cause the compressor to run continuously or even non-stop! Reason: when the ambient temperature is high, the compressor must run continuously to maintain the low temperature in the appliance.

Important! Please select the operation steps depending on the type of the bulb.

CHANGING THE LIGHT BULB

Warning!

Before changing the light bulb, switch off the appliance and unplug it, or pull the fuse or the circuit breaker.

Light bule data: 220-240V,max.15W.

To switch off the appliance, set the temperature regulator to position "0".

Unplug the mains plug. To change the light bulb, undo the screw. Press the light bulb cover and slide it backwards. Change the defective light bulb. Refit the light bulb cover and the screw. Put the refrigerator back into operation.

CHANGING THE LED BULB

Warning!

Changing the LED bulb carry out by inexperienced persons may cause injury or serious malfunctioning. It must be replaced by a qualified persons in order to avoid a hazard. Contact your local Service Force Center for help.

Before changing the light bulb, switch off the appliance and unplug it, or pull the fuse or the circuit breaker

LED bulb data: 220-240V.max.1.5W.

To switch off the appliance, set the temperature regulator to position "0".

Unplug the mains plug. To change the light bulb, undo the screw. Press the light bulb cover and slide it backwards. Pull out the Lampholders fixed block. Change the defective light bulb. Push back the LED bulb to the bottom, insert the Lampholders fixed block into the slot. Refit the light bulb cover and the screw.Put the refrigerator back into operation.

NOISES DURING OPERATION

The following noises are characteristic of refrigeration appliances:

Clicks

Whenever the compressor switches on or off, a click can be heard.

Humming

As soon as the compressor is in operation, you can hear it humming.

Bubbling

When refrigerant flows into thin tubes, you can hear bubbling or splashing noises.

Splashing

Even after the compressor has been switched off, this noise can be heard for a short time.

Hisense Refrigerator

Hisense Refrigerator

13

Storing food and drink

For optimal use of the refrigerator compartment observe the following instructions:
Never put hot liquid or food in the refrigerator while evaporating;
Cover or wrap food prior to storage (food containing spices in particular);
Arrange food so that air can circulate freely inside the compartment.
Meat (all types): wrap in protective material and store up to 1-2days maximum.
Cooked food and cold meals atc must be covered well and stored in any position in the refrigerator.
Fruit and vegetables should be cleaned and stored in the refrigerator unless rewrapped.

Food shelves

The walls of the cold storage area are equipped with guides to enable insertion of the grids or shelves in various positions as required.

Positioning inner door trays

Inner door trays can be inserted in various positions. To change the position proceed as follows: Pull the tray up out of its seat and refit in the new position.

The upper tray can be removed to ensure thorough cleaning when required.

Storing frozen food/freezing fresh food

Appliances with compartments with the ** symbol can be used to store frozen food for a maximum time of one month. Appliances with the ** symbol are suitable for storing frozen food but not for freezing fresh food, while appliance with ** symbol are suitable for both uses.

 Appliances with compartments that have no symbol are unsuitable for freezing fresh foods and for storing frozen food.

IMPORTANT! —In order to make the most of the volume of the fresh food storage compartment and frozen-food storage compartment, the user can removed one or more shelves, drawers, out of the appliance, according to your daily use.

DEFROSTING

Why defrosting

Water contained in food or getting into air inside the fridge be opening doors may form a layer pf frost inside. It will weaken the refrigeration when the frost is thick.

While it is more than 10mm thick, you should defrost.

Defrosting in fresh food storage compartment It is automatically controlled by switching the temperature regulator on or off so that there is no need of operation of defrosting. Water from defrosting will be drained into an drip tray through a drain pipe at the back of the fridge automatically. **Warning!**

Switching off the appliance. To switch off the appliance, turn the temperature regulator to position "0". **Periods of disuse**

In the event of prolonged periods of disuse, clean thoroughly after emptying, disconnect the appliance from the power supply and leave the door ajar to avoid the formation of unpleasant odors.


Hisense Refrigerator

HEATING

Please do not turn off or adjust auto setting and only use arrows to change temperature.



Controls Layout

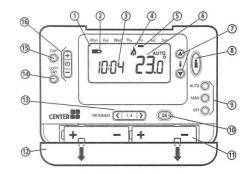

- 1 LCD Screen
- (2) Battery Low Indicator 3 Time Display
- (10) OK Button 11) Battery Compartment
- 4 Burner On Indicator
- 12) Battery Cover
- (5) Day Indicator
- (13) Program Buttons

Operating Mode Buttons

- 6 Temperature Display
- 14 Copy Day Button
- 7 Temperature Change Buttons
- 13 Set Day Button 16 Time Change Buttons
- 8 Temperature Enquiry Button

Note: The built-in heating program has been designed to provide normal comfort requirements, but if you want to customise the settings please see the next section 'Programming the EHE0200154'.

Setting-up the EHE0200361

This section shows you how to setup and run the thermostat in 3 simple steps:

STEP 1: Installing the Batteries

Note: Please follow the instructions in this section only if the thermostat screen is blank (no symbols or digits are displayed). If the room temperature is already displayed move on to Step 2: Setting the Date and Time.

To install the Batteries:

- a. Lift up the front cover of the thermostat to reveal the battery cover and product
- b. Remove the battery cover by pressing down and sliding out.
- c. Insert the 2 x AA LR6 Alkaline Batteries supplied with the thermostat, ensuring the correct orientation (see 'Controls Layout' on page 2).
- d. After a short pause the thermostat will display information on the screen and is now
- e. Replace the battery cover by sliding it firmly back into the front of the thermostat.

STEP 2: Setting the Time

To set the Date and Time:

- a. Press the DAY button once and the 'day indicator' will begin to flash.
- b. Press the DAY button until the correct day is reached (Day 1 = Monday). Press the (0K) button to confirm
- d. Press either of the ⊕ ⊕ or ⊕ buttons once to enter time setting mode. The LCD screen flashes the time digits (when the unit is powered for the first time the display
- **e.** Use the 0 e or \boxdot buttons to set the correct time then press the 0 button to confirm. Each press of the buttons will change the time by one minute and holding them down will change the time slowly at first and get progressively quicker.
- Note: If this mode is entered accidentally then press the AUTO, MAN or OFF

STEP 3: Running the Built-in Heating Program

The thermostat is now ready for operation. Press the AUTO button and the built-in heating program will start running.



The Built-in Heating Program

The built-in heating program has 4 temperature level changes per day that can be set between 3.00am and 2.50am the following day - allowing you to maintain the evening temperature after midnight. Each temperature level can be set between 5°C and 35°C, and adjusted in 0.5°C increments. The factory default program for heating is as follows.

Mond	av	to	Fri	d.
(Day 1				

Period	1	2	3	4
Time	6:30	8:00	18:00	22:30
Temperature	21°C	18°C	21°C	16°C

Saturday & Sunday (Day 6 & 7)

Temperature	21°C	21°C	21°C	16°C
Time	8:00	10:00	18:00	23:00
Period	1	2	3	4

Reviewing the Heating Program

To review or edit the heating program use the **PROGRAM** ② or ③ buttons to navigate between the 4 individual programming periods for that day. Use the **DAY** button to step through each day of the week, so the complete 7 day heating program can be reviewed or edited.

Modifying the Heating Program

To change the heating program:

a. Press either of the **PROGRAM ②** or **③** buttons to enter the programming mode. The time / temperature settings for period **①** on Monday (Day 1) will be flashing as shown. The active period is highlighted by a flashing square around the numbers at the bottom of the screen and the selected day is shown with the day indicator.



- b. To adjust the period start time use the ② ⊕ or ⊕ buttons, the 'OK?' indicator will be displayed to confirm the change. Holding the button down will change the time quickly.
- Note: If you are pressing the 3 or = buttons and the display flashes the next period, it means the next period will be pushed forward.
- c. Once the required time is reached press the @ button to confirm.

Note: If the original time setting did not require adjustment press the (III) button to move to step 'd'.

Programming the EHE0200361

- d. The temperature setting for period ① on Monday (Day 1) will now be flashing. To adjust this press the § ♠ or ♥ buttons and confirm the setting again by pressing the ♠ button
- The next time and temperature period will now be active. Adjust this by repeating steps b - d above until all 4 periods are set for Monday or press the AUTO button to run the program as set, at any time.

You now have a choice of how to set the program for the next day:

f. i) Press the COPY DAY button to copy Monday's program into Tuesday. The display will go blank apart from the 'non flashing' day indicator, which indicates the day copied and the 'flashing' target day to copy the program to. To accept this day press the @D button. To select a different target day press the DAY button until the 'flashing' day indicator is under the required day, then accept it by pressing the @D button. Note: Once the target day is confirmed it becomes the day that is copied if the COPY DAY button is pressed again.

OF

ii) Press the DAY button to move the day indicator to Tuesday (Day 2). The program for that day can then be adjusted by following steps b to e. Programs for the remaining days can be set in the same way, using the DAY button to move to the next day.

To exit the programming mode select the desired operating mode by pressing the AUTO, MAN or OFF buttons. Note: To run the adjusted program select the AUTO mode.

Disabling / Enabling Time Periods

The thermostat has 4 periods each day that can be programmed, but you may not need all of these switch points for your heating requirements. Therefore, any period from 2 to 4 can be removed from (or returned to) the heating program profile.

To disable or enable time periods:

- a. To disable unwanted periods go to the desired period (2) to (4) using the PROGRAM (3) or (3) buttons to navigate, ensure the correct period is highlighted with the flashing square symbol. Press and hold the (1) button for at least 2 seconds and the display will indicate the period has been removed from the program.
- b. To enable periods again follow the same procedure as above, navigating to the already disabled period. To enable this period again press and hold the <a>B button for at least 2 excepts

4

Operating the EHE0200361

Choosing the Operating Mode

The thermostat can operate in three different modes: Automatic, Manual or Off. To set the operating mode press either of the AUTO, MAN or OFF buttons. The screen indicates which mode is currently active by displaying AUTO, MAN or OFF.

- AUTO (automatic) mode sets the thermostat to follow the built-in temperature
 program (default or personalised). Operating the thermostat in this mode is the best
 way to maintain a high level of temperature comfort whilst maximising your energy
 savings.
- OFF mode sets the thermostat to control to a minimum temperature setting of 5°C (default) that acts as a frost protection measure for your home.

During Normal Operation

Temperature Enquiry

In AUTO, MAN and OFF operating modes the thermostat will display the current room temperature. To review the programmed 'target' temperature (the temperature which the thermostat is trying to maintain) press the () button. This 'target' temperature value will be displayed flashing for 5 seconds before returning to the current room temperature value.

· Temperature Override

During normal operation (AUTO mode) the programmed temperature can be adjusted manually by pressing the \S \bigcirc or \bigcirc buttons or the \bigcirc button. The 'target' temperature will be displayed and flash for 5 seconds - during this time the \bigcirc \bigcirc or \bigcirc buttons can be used to modify the set value.

Note: This temperature override is cancelled at the next programmed temperature change.

Adjusting the Time

To adjust only the time during normal operation use the 1 to 1 buttons to adjust the time and press the 1 button again to confirm any changes.

6

Troubleshooting the EHE0200361

Symptom	Remedy
Blank Display (Power Loss).	Check batteries are installed by removing the battery cover.
	Check batteries have been installed in the correct orientation.
	Replace the batteries.
Display shows flashing symbol.	The batteries in the thermostat are low on power - Replace the batteries.
Display shows — symbol.	A fault has occurred in your heating system. Remove and re-insert the batteries.
	If the symbol does not clear after a few minutes contact your installer.
Relay box red LED is constantly on or flashing.	RF communication lost due to the wrong location of the room unit. Call installer.

NOTE: You can control the boiler manually when the RF communication is lost. Press the push button on the relay box to switch the boiler on and off. When the green LED is on - the boiler is on.

FAQ's

How do I change the batteries on the thermostat when they run out?

The thermostat constantly monitors the battery power level, which typically lasts for about 2 years before the batteries need to be replaced. When the power is running low a flashing symbol will be displayed on the screen. To change the batteries follow the steps in the above section (STEP 1: Installing the Batteries' on page 3), replacing the used batteries with new ones in Step c. Note: While changing the batteries your program settings will be stored but you may need to adjust the time settings to be correct.

How do I set one temperature for the whole day?

To operate as a simple thermostat with one temperature throughout the day, select the manual operating mode by pressing the **MAN** button. Adjust the temperature by pressing the **§** or **®** buttons - this can be set anywhere from 5°C to 35°C in 0.5°C steps. The thermostat will continue to maintain this temperature until another operating mode is selected or the temperature is adjusted.

7

43 | Page

TV, DVD AND SMART FEATURES

Lounge TV and FreeSat

Turn both the TV and FreeSat off standby - using large remote for TV and smaller remote for the FreeSat box.

The FreeSat box can take a moment to turn on and load.

The TV should already be set to HDM11 source, which is needed to view FreeSat TV and should automatically start.

If the TV is not set to HDMI1 press the source button at the top of the TV controls and then the up and down arrows to select HDMI1 source.

Use the smaller FreeSat controls to select channels and the guide button to bring up the channel guide.

Use the larger TV controls to adjust the volume.

Trouble Shooting

No Volume: turn TV and FreeSat box off and back on Distorted Picture Colour: turn TV and FreeSat box off and back on

DVD

The DVD player on the TV does not work. Please use the separate Sony DVD player underneath.

Insert the DVD (please ensure that it is the correct way around). This should automatically change the TV to DVD source. If this does not happen press the source button on the TV remote control and use the arrows to select HDMI2.

Use the Sony DVD controls to navigate the DVD menu and the TV controls to adjust the volume

Now Box

Ensure the Now box is turned on at the wall, next to the fire. Use the TV control source button and select Roku.

The Now box can be used to watch free iPlayer channels e.g. BBC iPlayer To watch subscription channels such as Now Movies or Entertainment you will need your own login. Please ensure you log out before departing.

Smart TV features

The TV has all the ordinary Smart TV features and is connected to the internet. You can logon to features such as Netflix using your own accounts. If you do this please ensure that you safely logout before leaving. It can take a while for Netflix to open.

Bedroom TV and FreeSat

Turn both the TV and FreeSat off standby - using large remote for TV and smaller remote for the FreeSat box.

The FreeSat box can take a moment to turn on and load.

The TV should already be set to HDM11 source, which is needed to view FreeSat TV and should automatically start.

If the TV is not set to HDMI1 press the TV-AV button between the volume and programme buttons and then the programme arrows to select HDMI1 source.

Use the smaller FreeSat controls to select channels, volume and the guide button to bring up the channel guide.

Trouble Shooting

No Volume: turn TV and FreeSat box off and back on

Distorted Picture Colour: turn TV and FreeSat box off and back on

DVD

The TV is equipped with a built in DVD player, which can be found on the right-hand side of the TV.

To play a DVD, please check there is not a DVD already in the player by pressing the eject button on the TV or TV remote.

Insert the DVD (please ensure that it is the correct way around). This should automatically change the TV to DVD source. If this does not happen press the source button on the TV remote control and use the arrows to select DVD.

Use the TV controls to navigate the DVD menu and adjust the volume

If you require any further help please do not hesitate to contact us.

TV FREESAT



Now & Next Browser

The SX makes it easy to browse what's on whilst watching full screen TV. Press OK to display the Now & Next Browser for the current channel then press UP or DOWN to browse other channels.

- To watch programmes on now and change channel, press OK
- To set a reminder for programmes on next, press RIGHT to highlight it and press OK (see 7. Reminders)
- To view detailed info about a highlighted programme, press INFO

Quickly Changing Channel

There are 3 ways to directly change channel whilst watching TV:

- Press P-UP or P-DOWN to change to the channel above or below
- Enter a channel number with the number buttons
- Press SWAP to change to the last channel you were watching

Volume & Accessibility

Turn the volume up or down with V+ or V-. To mute and unmute the sound, press IXI
Toggle Subtitles and Audio Description on and off with the IXIII and IXIII buttons.



Basics

Press GUIDE to display the full TV Guide and browse what's on across the next 7 days. Move around the Guide using the directional pad, then:

- · Press OK to watch programmes on now
- · Press OK to set a reminder for programmes on later (see: 7. Reminders)
- · Press INFO to view detailed info about a highlighted programme

Quickly Navigating

As there are lots of channels and programmes to browse, you can get around more quickly by:

- Pressing P-UP and P-DOWN to page up and down
- · Holding LEFT or RIGHT to skip through time
- Pressing or to skip 24 hours backwards or forwards

When you've browsed ahead, simply press to skip back to what's on now.

Lists

The TV Guide can be filtered to show only HD, Radio or your Favourite Channels:

- Press
- Choose a list using UP or DOWN
- · Press OK to select it

5



The info screen displays the description, genre and other key information for a programme. It is displayed by pressing INFO when watching TV, using the Now & Next Browser or the TV Guide.

Icons that can be displayed



Part of a series



In HD





Surround sound audio



Programme is in two or more parts (e.g. a movie split by the evening news).





Audio Description



Guidance

Browsing Series & Repeats

- If the programme is part of a series, you can press UP to browse all episodes in the schedule.
- If the programme is showing again on any channel, you can press DOWN to browse repeats in the schedule.



Press MENU to display the Main Menu. Use UP & DOWN to highlight an option and OK to select it

Press BACK to go back to a previous menu or press EXIT to return to full screen TV.

The Main Menu has the following options:

TV Guide

View what's on across the next 7 days. You can also press GUIDE on the remote (see page 5).

Reminders

View and cancel reminders that have been set.

Channels

Manage your favourite and protected channel lists or delete channels (see page 8).

Settings

View and modify the SX's settings.

Help

View Help with using the SX and detailed System Info for troubleshooting.

6



Favourite Channels

Select 'Edit Favourites' in the Channels Menu to choose channels for your favourites list. As explained in section 2, TV Guide, your favourites can be used to filter the TV Guide. They can also be quickly browsed using the Now & Next Browser:

- · Whilst Watching TV, press OK to display the Now & Next Browser
- Notice in the top left of the browser it shows: PAVOURITES
- Whilst the Browser is displayed, each press of cycles through your favourite channels

Protected Channels

Protected Channels are hidden and can only be shown by entering your PIN. To choose channels to protect, select 'Protected Channels' in the Channels menu and then enter your PIN.

When you want to temporarily show your protected channels, highlight 'Protected Channels' in the Channels Menu and then select the 'Show' option that appears to the right. After entering your PIN, all Protected Channels will be shown until the SX next enters standby or you choose the option to hide them again.

Deleting Channels

Channels can be deleted entirely by selecting the 'Delete Channels' option in the Channels Menu. If you want to restore them in the future, select the 'Freesat Retune' option in the Tuning section of Settings.



Using Reminders

When a programme is highlighted in the TV Guide or the Now & Next Browser that is on later, press OK to add a reminder. To cancel it, just press OK again.

Reminders are displayed 60 seconds before a programme is scheduled to start. The SX has an option in the Tuning section of Settings called 'Reminder AutoTune' that is turned off by default, meaning:

- A reminder will only be displayed if the SX is on
- · You must choose to watch the programme within 60 seconds to change the channel
- If you don't, the reminder will be cancelled and the channel will not change

When 'Reminder AutoTune' is turned on:

- If the SX is in standby it will turn on for the reminder and the channel will change automatically
- If the SX is on the reminder will be displayed as normal but at the end of the 60 seconds the channel will change automatically

Reminders

All reminders that have been set can be viewed in the Reminders Menu by pressing MENU and selecting 'Reminders'.

YOUR REMOTE

(b)

Standby on/off





Volume up/down



Mute



Audio Description on/off



Subtitles on/off





Next/previous channel when watching TV

Page up/down the TV Guide and other menus



Open the Main Menu



Display programme information







Chooses options in menus





Navigate menus



Display Now & Next when watching TV

Select options & perform on-screen actions



Open the TV Guide



Swap to the last channel viewed



Back to previous menu or to watching TV



Exit all menus and watch TV



Open a channel's interactive service (if available)



Enter a channel number

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
There's no picture or sound and even	The HDMI/AV cable may be disconnected.	Check the HDMI or AV cable connections between the SX and your TV.
the SX's menus can't be seen	The input the Manhattan SX is connected to may not be selected on your TV.	Select the correct HDMI/AV input (see your TV's manual for guidance).
	Your TV may not correctly communicate the resolutions it is capable of and an incompatible resolution may be selected.	 Turn the SX on and wait 30 seconds Press MENU Press & Hold '0' for 5 seconds The SX will try each of the 3 HD resolutions for 15 seconds in this order: 1080p. 1080i and 720p Select 'Confirm' when you can see the picture
No signal found during Install	Cable from the satellite dish may be disconnected.	Check the cable connections between SX and dish. Consult your installer if necessary.
	Dish may be out of alignment or pointing at the wrong position.	Consult your installer to have the dish re-aligned.
	Signal is from an SCR distribution network.	Configure SCR settings when option displays during signal check. Consult your installer.
	Freesat satellite failure.	Check Freesat's website at www.freesat.co.uk
Postcode not accepted during Install	stcode not Freesat broadcast error Choose not to try again and to continue with the default ch	
	No space in postcode	Make sure the space is entered in the postcode.
The TV picture is not HD	You may be watching an SD channel or using the AV connection to your TV.	Connect the SX with an HDMI cable to an HD-Ready TV and select an HD channel.
No information for a channel in the TV Guide	formation Information on the channel Wait for the Guide to download.	Wait for the Guide to download.
	You are on a Non-Freesat channel.	Select a Freesat channel.
Your remote control does not work	The SX is not turned on or its front is obstructed.	Ensure the front of the receiver is not obstructed.
	Remote batteries may have run out of power	Replace batteries in the remote control.
Your SX switches off after 3 hours	The SX is set to go to standby by default after 3 hours without interaction.	Set Auto Standby to 'Off' in the System section of Settings.
You can't remember the PIN	You've forgotten it or someone has changed it.	Your PIN can be reset with the master PIN. Please contact us.

MUD DADDY



MUD DADDY Instruction Manual



How to start

1 Rinse a container with water before use.

- 2. Connect pipe to the brush and container and secure with nuts.
 - 3. Make sure all nuts are screwed hand tight before use.

How to use Your Mud Daddy

1. Fill the container with cold or hot water

2. Ensure that pump is screwed into the

container tightly. (This is very important to avoid losing the pressure).

3. Apply 15 to 25 pumps (DO NOT OVER PRESSURE)

4. For the best result place your Mud Daddy 20 cm above the floor.

5. Move trigger on brush to unlock position. (slide)

6. Press and hold the trigger to release the water.

7. After activity move trigger to lock position.

8. Release spare pressure by opening the cap with pump.

POTO: LIST ON THE BUT OF A PROPERTY OF THE SECOND OF THE

Troubleshooting

Issue	Problem	Solution
		Ensure all connections are tight
Week or	Mud Daddy will not	Ensure pump cap is closed properly.
no pressure	pressurise	Check O rings and seal are lubricated and shows
		no signs of wear- replace if required (Cap and pump)
	Obstruction	There could be a blockage in the in the pipe or outlet tube
Leaks from	Worn or damaged	Check if washers are in the place and free from damaged
brush	washer in brush	Replace if required
. 18	Damaged pipe	Make sure nuts are in the place. Replace if required

DO NOT LEAVE THE WATER INSIDE THE CONTAINER AND BRUSH IF STORED IN TEMPERATURE BELOW 0 **DEGREES**

Product Global Ltd.

email:hello.muddaddy@gmail.com

www.muddaddy.com

BIKE STAND

Assembly



Attaching the bicycle

1: Set the foot of the bike stand by 1: Set the foot of the bike stand by pushing the articulated assembly (1) on the Upright (A) down until it stops. Tighten screw 1. The feet can de spread less wide however this will compromise stability and the extent to which the clamp bar

the extent to which the clamp bar can be extended.
2: Deploy the foot holders (2) down into a horizontal position and make sure the item is placed on a solid and stable surface.
3: Insert telescopic bar (B) in upright (A) before mounting the bike support stand (C) on the telescopic har

telescopic bar.

4: Mount the bike support stand (C) on the telescopic bar.

5: Attach the tool shelf (D) to Upright (A) and set to a convenient height.

Additional Stability
The feet of the work stand can be fixed to the floor to achieve better

Item (E) is a wheel stabilizer that attaches the front wheel to the frame of the stand.

Instructions

•Do not exceed the maximum extension of the height adjustment tube (B) there is a maximum extension mark on the tube
•Do not extend the besides and extension mark on the state. Do not extend the horizontal clamp Bar further than shown in Fig 1. The bicycle should not extend beyond the feet to avoid tipping

Choose your clamping position on the Bike to get as even a balance as possible to avoid straining the clamp and to avoid tipping. (See comparison of Fig1 and Fig 2)







Please adjust the angles BEFORE loading the bike and make sure all locking screws are tightened in advance. If adjusting the height or angle of the stand after loading a bike we recommend that 2 people are used.

To stabilize the front wheel, you can insert the front wheel stabilizer (E) between the handlebars of the front wheel and the telescopic bar (Fig. 4).

Tool container

The tool tray has a magnet for securing small pieces and tools

Maintenance, storage

Clean the stand with warm water and neutral pH soap. Please always wipe the clean surface with a dry cloth! Avoid using harsh chemicals (eg solvents)! Store the item in a dry and well ventilated place.

Important!

Please read these instructions before using the stand. Keep for future reference and do not destroy!

Technical data

Maximum load: 30 kg For bicycle frames from 25mm to 45 mm

Intended use

This bicycle working stand was created for private use only.

Safety tips

Risk of injury! •Please carefully read the installation instructions and user manual before installation and follow the order of steps as provided in the instructions.

•WARNING! Do not exceed the maximum load of 30 kg! Exceeding the maximum load risks injury and damage to the item
•Check all parts of the stand. Loose screws must be tightened and any defective

parts must be replaced to avoid damage to the item.

•Please ensure that the socket head screws connecting the upper bar are always •Warning! Please put the bicycle work stand only on a solid and stable surface to

•Warning! Nobody should try to ride the bicycle when it is mounted on the stand!

·Avoid damage! To avoid damage to the bicycle, please do not squeeze conduit and / or cable with the retaining clamp

and or capie will the retaining starting with the start of the start o

⚠ CAUTION!

Improper use or use for other applications may endanger the health of the person or cause damage.

- Content Delivery

 1 x Allen key for use with cap head screws
- 1 x foot assembly (A) 1 x telescopic bar (B)
- 1 x bike support stand (C)
- 1 x tool shelf (D) 1 x front wheel stabilizer (E)
- 1 x manuai